



Public

REV	07
Date	10-2024
Supersedes	D-EOMHP01302-20_06EN

**Operating Manual
D-EOMHP01302-20_07EN**

Air Cooled chiller/heat pump with scroll compressors

EWYT_B

EWAT_B

TABLE OF CONTENTS

1	SAFETY CONSIDERATIONS	5
1.1	General	5
1.2	Before switching the unit	5
1.3	Avoid electrocution	5
2	GENERAL DESCRIPTION	6
2.1	Basic Information	6
2.2	Abbreviations used	6
2.3	Controller Operating Limits	6
2.4	Controller Architecture	6
2.5	Communication Modules	7
3	USING THE CONTROLLER	8
3.1	Navigating	8
3.2	Passwords	8
3.3	Editing	9
3.4	Mobile app HMI	9
3.5	Basic Control System Diagnostic	10
3.6	Controller maintenance	11
3.7	Optional Remote User Interface	11
3.8	Embedded Web Interface	12
4	WORKING WITH THIS UNIT	13
4.1	Chiller On/Off	13
4.1.1	Keypad On/Off	13
4.1.2	Scheduler and Silent mode functionalities	14
4.1.3	Network On/Off	15
4.2	Water Setpoints	15
4.3	Unit Mode	15
4.3.1	Heat/Cool Switch (Heat Pump Only)	17
4.3.2	Energy Saving mode	17
4.4	Unit Status	17
4.5	Network Control	18
4.6	Thermostatic Control	19
4.7	Date/Time	20
4.8	Pumps	20
4.9	External Alarm	21
4.10	Power Conservation	21
4.10.1	Demand Limit	21
4.10.2	Setpoint Reset	22
4.10.2.1	Setpoint Reset by OAT (A/C units only)	23
4.10.2.2	Setpoint Reset by External 4-20Ma signal	24
4.10.2.3	Setpoint Reset by DT	24
4.11	Electrical Data	25
4.12	Controller IP Setup	26
4.13	Daikin On Site	27
4.14	Heat Recovery	28
4.15	Rapid Restart	28
4.16	FreeCooling (Cooling Only)	29
4.16.1	FreeCooling Switch	32
4.16.2	Network On/Off	32
4.17	Collective Housing (Changeover Function, Heat Pump only)	32
4.18	Domestic Hot Water	33
4.19	Bivalent Operations	34
4.20	Software Options	35
4.20.1	Changing the Password for buying new Software Options	35
4.20.2	Inserting the Password in a Spare Controller	35
4.20.3	Modbus MSTP Software Option	36
4.20.4	BACNET MSTP	37
4.20.5	BACNET IP	38
4.20.6	PERFORMANCE MONITORING	38
4.20.7	Cascade	40
4.21	Smart Grid Application	40
5	ALARMS AND TROUBLESHOOTING	41
5.1	Unit Alerts	41

- 5.1.1 BadLWTRreset - Bad Leaving Water Temperature Reset Input 41
- 5.1.2 EnergyMeterComm - Energy Meter Communication Fail 41
- 5.1.3 SmartGridComm – Smart Grid Communication Fail 41
- 5.1.4 EvapPump1Fault - Evaporator Pump #1 Failure 42
- 5.1.5 BadDemandLimit - Bad Demand Limit Input..... 42
- 5.1.6 EvapPump2Fault - Evaporator Pump #2 Failure 42
- 5.1.7 Switch Box Temperature sensor fault 43
- 5.1.8 ExternalEvent - External Event 43
- 5.1.9 HeatRec EntWTempSen - Heat Recovery Entering Water Temperature sensor fault 43
- 5.1.10 HeatRec LvgWTempSen - Heat Recovery Leaving Water Temperature sensor fault 44
- 5.1.11 HeatRec FreezeAlm - Heat Recovery Water Freeze Protect alarm 44
- 5.1.12 Option1BoardComm – Optional board 1 communication fail 44
- 5.1.13 Option2BoardComm – Optional board 2 communication fail 44
- 5.1.14 Option3BoardComm – Optional board 3 communication fail 45
- 5.1.15 EvapPDSen – Evaporator Pressure Drop sensor fault 45
- 5.1.16 LoadPDSen – Load Pressure Drop sensor fault 46
- 5.1.17 DHW WaterTmpSen – Domestic Hot Water Temperature sensor fault (Heat Pump Only) 46
- 5.1.18 BivSystLwtRemAlm– Bivalent System LWT Remote Alarm (Heat Pump Only) 46
- 5.2 Unit Pumpdown Alarms 47
 - 5.2.1 UnitOff EvpEntWTempSen - Evaporator Entering Water Temperature (EWT) sensor fault 47
 - 5.2.2 UnitOffLvgEntWTempSen - Evaporator Leaving Water Temperature (LWT) sensor fault 47
 - 5.2.3 UnitOffAmbTempSen - Outside Air Temperature sensor fault 47
 - 5.2.4 OAT:Lockout - Outside Air Temperature (OAT) Lockout (only in Cooling Mode)..... 48
 - 5.2.5 UnitOff CollHsngWTempSen – Collective Housing Water Temperature (LWT) sensor fault (Heat Pump Only) 48
- 5.3 Unit Rapid Stop Alarms 48
 - 5.3.1 Power Failure - Power Failure (only for units with the UPS option) 48
 - 5.3.2 UnitOff EvapFreeze - Evaporator Water Temperature Low alarm 49
 - 5.3.3 UnitOff ExternalAlarm - External alarm 49
 - 5.3.4 UnitOff PVM - PVM 49
 - 5.3.5 UnitOff EvapWaterFlow - Evaporator Water Flow Loss alarm 50
 - 5.3.6 UnitOff EXVDriverComm - EXV Driver Extension Communication Error 50
 - 5.3.7 UnitOff Option4BoardComm – Optional board 4 communication fail 50
 - 5.3.8 DHW 3WVAlarm – Domestic Hot Water 3 Way Valve Alarm (Heat pump only) 51
 - 5.3.9 UnitOff WaterOverHeat– Water Over Temperature Alarm 51
- 5.4 Circuit Events 51
 - 5.4.1 Cx CompXStartFail – Compressor starting fail event 51
 - 5.4.2 Cx DischTempUnload – High Discharge Temperature Unload event 52
 - 5.4.3 Cx EvapPressUnload – Low Evaporator Pressure Unload event 52
 - 5.4.4 Cx CondPressUnload – High Condenser Pressure Unload event 52
 - 5.4.5 Cx HighPressPd – High Pressure during Pumpdown event 53
 - 5.4.6 DischTmp CompXSenf – Discharge Temperature of compressor sensor fault 53
 - 5.4.7 CxStartFail - Start Fail 53
- 5.5 Circuit Pumpdown Stop Alarms 54
 - 5.5.1 Cx Off DischTmpSen - Discharge Temperature Sensor fault 54
 - 5.5.2 CxOff OffSuctTempSen - Suction Temperature Sensor fault (Heating Only) 54
 - 5.5.3 CxOff GasLeakage - Gas Leakage fault 55
- 5.6 Circuit Rapid Stop alarms 55
 - 5.6.1 CxOff CondPressSen - Condensing Pressure sensor fault 55
 - 5.6.2 CxOff EvapPressSen - Evaporating Pressure sensor fault 55
 - 5.6.3 CxOff DischTmpHigh - High Discharge Temperature Alarm 56
 - 5.6.4 CxOff CondPressHigh – High Condensing Pressure alarm 56
 - 5.6.5 CxOff EvapPressLow - Low Pressure alarm 57
 - 5.6.6 CxOff RestartFault – Restart Fault 57
 - 5.6.7 CxOff MechHighPress - Mechanical High Pressure Alarm 58
 - 5.6.8 CxOff NoPressChange - No Pressure Change At Start Alarm 58
 - 5.6.9 CompXAlm – Compressor starting fail alarm 59
 - 5.6.10 Cx FailedPumpdown - Failed Pumpdown procedure 59
 - 5.6.11 CmpX Protection – Compressor Protection 59
 - 5.6.12 CxOff SSH LowLimit – SSH too low 60
 - 5.6.13 CxOff Low DSH – DSH too low 60
 - 5.6.14 CxOff Drift Suct temp 60
 - 5.6.15 CxOff LowPrRatio - Low Pressure Ratio Alarm 60
 - 5.6.16 CxEXVDriverFailure – EXV Driver Failure (mono unit) 61
 - 5.6.17 CxOff BadFeedbackVlv – Bad Feedback from Valves Alarm (Cooling Only) 61
 - 5.6.18 Cx BadFeedbackVlvFC – Bad Feedback from Valves in FreeCooling mode Alarm (Cooling Only) 61
 - 5.6.19 CxOff BadFeedbackVlvMech – Bad Feedback from Valves in Mechanical mode Alarm (Cooling Only) 62

5.6.20	CxOff BadFeedbackVlvMechPd – Bad Feedback from Valves in Mechanical PumpDown mode Alarm (Cooling Only)	62
5.6.21	CxOff BadFeedbackVlvFCPd – Bad Feedback from Valves in FreeCooling PumpDown mode Alarm (Cooling Only)	62
5.6.22	CxOff BadFeedbackVlvOnTransition – Bad Feedback from Valves in Transition state Alarm (Cooling Only)	63

1 SAFETY CONSIDERATIONS

1.1 General

Installation, start-up and servicing of equipment can be hazardous if certain factors particular to the installation are not considered: operating pressures, presence of electrical components and voltages and the installation site (elevated plinths and built-up up structures). Only properly qualified installation engineers and highly qualified installers and technicians, fully trained for the product, are authorized to install and start-up the equipment safely.

During all servicing operations, all instructions and recommendations, which appear in the installation and service instructions for the product, as well as on tags and labels fixed to the equipment and components and accompanying parts supplied separately, must be read, understood and followed.

Apply all standard safety codes and practices.

Wear safety glasses and gloves.



Do not operate on a faulty fan, pump or compressor before the main switch has been shut off. Overtemperature protection is auto-reset, therefore the protected component may restart automatically if temperature conditions allow it.

In some unit a push button is placed on a door of the unit electrical panel. The button is highlighted by a red color in yellow background. A manual pressure of the emergency stop button stops all loads from rotating, thus preventing any accident which may occur. An alarm is also generated by the Unit Controller. Releasing the emergency stop button enables the unit, which may be restarted only after the alarm has been cleared on the controller.



The emergency stop causes all motors to stop, but does not switch off power to the unit. Do not service or operate on the unit without having switched off the main switch.

1.2 Before switching the unit

Before switching on the unit read the following recommendations:

- when all the operations and all the settings have been carried out, close all the switchbox panels;
- the switchbox panels can only be opened by trained personnel;
- when the UC requires to be accessed frequently the installation of a remote interface is strongly recommended;
- LCD display of the unit controller may be damaged by extremely low temperatures (see chapter 2.4). For this reason, it is strongly recommended to never power off the unit during winter, especially in cold climates.

1.3 Avoid electrocution

Only personnel qualified in accordance with IEC (International Electrotechnical Commission) recommendations may be permitted access to electrical components. It is particularly recommended that all sources of electricity to the unit be shut off before any work is begun. Shut off main power supply at the main circuit breaker or isolator.

IMPORTANT: This equipment uses and emits electromagnetic signals. Tests have shown that the equipment conforms to all applicable codes with respect to electromagnetic compatibility.



Direct intervention on the power supply can cause electrocution, burns or even death. This action must be performed only by trained persons.



RISK OF ELECTROCUTION: Even when the main circuit breaker or isolator is switched off, certain circuits may still be energized, since they may be connected to a separate power source.



RISK OF BURNS: Electrical currents cause components to get hot either temporarily or permanently. Handle power cable, electrical cables and conduits, terminal box covers and motor frames with great care.



ATTENTION: In accordance with the operating conditions the fans can be cleaned periodically. A fan can start at any time, even if the unit has been shut down.

2 GENERAL DESCRIPTION

2.1 Basic Information

Microtech® IV is a system for controlling single or dual-circuit air/water-cooled liquid chillers. Microtech® IV controls compressor start-up necessary to maintain the desired heat exchanger leaving water temperature. In each unit mode it controls the operation of the condensers to maintain the proper condensation process in each circuit.

Safety devices are constantly monitored by Microtech® IV to ensure their safe operation. Microtech® IV also gives access to a Test routine covering all inputs and outputs.

2.2 Abbreviations used

In this manual, the refrigeration circuits are called circuit #1 and circuit #2. The compressor in circuit #1 is labelled Cmp1. The other in circuit #2 is labelled Cmp2. The following abbreviations are used:

A/C	Air Cooled
CEWT	Condenser Entering Water Temperature
CLWT	Condenser Leaving Water Temperature
CP	Condensing Pressure
CSRT	Condensing Saturated Refrigerant Temperature
DSH	Discharge Superheat
DT	Discharge Temperature
E/M	Energy Meter Module
EEWT	Evaporator Entering Water Temperature
ELWT	Evaporator Leaving Water Temperature
EP	Evaporating Pressure
ESRT	Evaporating Saturated Refrigerant Temperature
EXV	Electronic Expansion Valve
HMI	Human Machine Interface
MOP	Maximum operating pressure
SSH	Suction SuperHeat
ST	Suction Temperature
UC	Unit controller (Microtech IV)
W/C	Water Cooled

2.3 Controller Operating Limits

Operation (IEC 721-3-3):

- Temperature -40...+70 °C
- Restriction LCD -20... +60 °C
- Restriction Process-Bus -25...+70 °C
- Humidity < 90 % r.h (no condensation)
- Air pressure min. 700 hPa, corresponding to max. 3,000 m above sea level


Transport (IEC 721-3-2):

- Temperature -40...+70 °C
- Humidity < 95 % r.h (no condensation)
- Air pressure min. 260 hPa, corresponding to max. 10,000 m above sea level.

2.4 Controller Architecture

The overall controller architecture is the following:

- One Microtech IV main controller
- I/O extensions as needed depending on the configuration of the unit
- Communications interface(s) as selected
- Peripheral Bus is used to connect I/O extensions to the main controller.

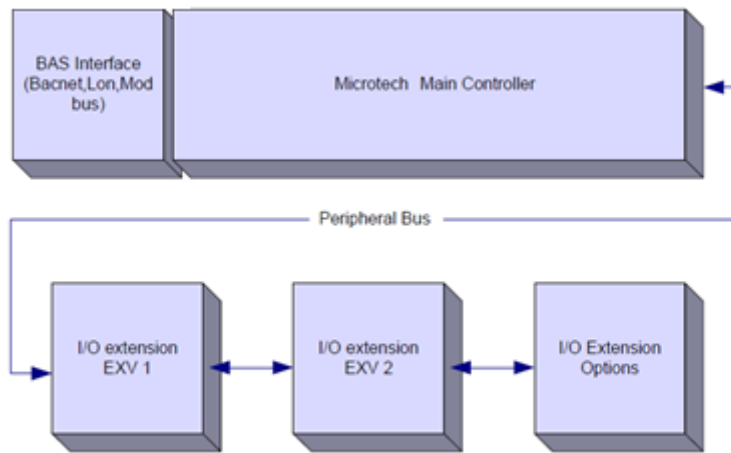

Maintain the correct polarity when connecting the power supply to the boards, otherwise the peripheral bus communication will not operate and the boards may be damaged.


2.5 Communication Modules

Any of the following modules can be connected directly to the left side of the main controller to allow a BAS or other remote interface to function. Up to three can be connected to the controller at a time. The controller should automatically detect and configure itself for new modules after booting up. Removing modules from the unit will require manually changing the configuration.




Module	Siemens Part Number	Usage
BacNet/IP	POL908.00/MCQ	Optional
Lon	POL906.00/MCQ	Optional
Modbus	POL902.00/MCQ	Optional
BACnet/MSTP	POL904.00/MCQ	Optional

3 USING THE CONTROLLER

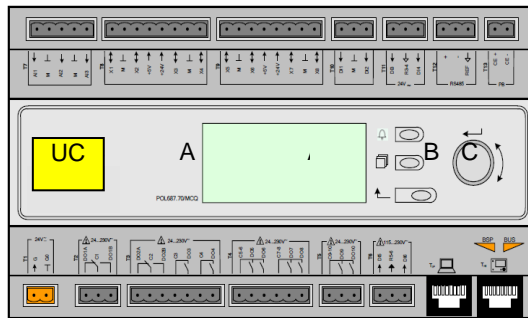The standard HMI consists of an inbuilt display (A) with 3 buttons (B) and a push'n'roll control (C).



The keypad/display (A) consists of a 5-line by 22 character display. The function of the three buttons (B) is described below:


-  Alarm status (from any page it links with the page with alarm list, alarm log and alarm snapshot if available)
-  Back to Main Page
-  Back to the previous level (it can be the Main Page)

The push'n'roll command (C) is used to scroll between the different menu pages, settings and data available on the HMI for the active password level. Rotating the wheel allows to navigate between lines on a screen (page) and to increase and decrease changeable values when editing. Pushing the wheel acts as an Enter Button and will jump from a link to the next set of parameters.


3.1 Navigating

When power is applied to the control circuit, the controller screen will be active and display the Home screen, which can also be accessed by pressing the Menu Button.


An example of the HMI screens is shown in the following picture.

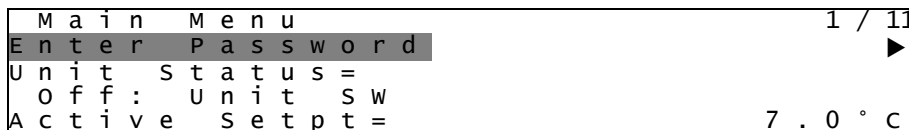

A bell ringing in the top right corner will indicate an active alarm. If the bell doesn't move it means that the alarm has been acknowledged but not cleared because the alarm condition hasn't been removed. A LED will also indicate where the alarm is located between the unit or circuits.

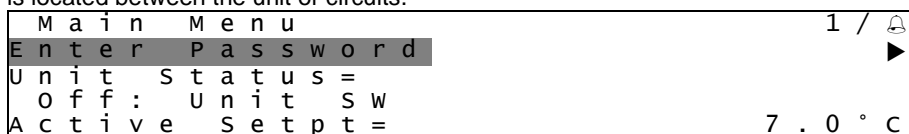

The active item is highlighted in contrast, in this example the item highlighted in Main Menu is a link to another page. By pressing the push'n'roll, the HMI will jump to a different page. In this case the HMI will jump to the Enter Password page.



3.2 Passwords

The HMI structure is based on access levels that means that each password will disclose all the settings and parameters allowed to that password level. Basic informations about the status can be accessed without the need to enter the password. The user UC handles two level of passwords:

USER	5321
MAINTENANCE	2526

The following information will cover all data and settings accessible with the maintenance password.

In the Enter Password screen, the line with the password field will be highlighted to indicate that the field on the right can be changed. This represents a setpoint for the controller. Pressing the push'n'roll the individual field will be highlighted to allow an easy introduction of the numeric password.

E n t e r P a s s w o r d	2 / 2
E n t e r P W	5 * * *


The password will time out after 10 minutes and is cancelled if a new password is entered or the control powers down. Entering an invalid password has the same effect as continuing without a password. It is changeable from 3 to 30 minutes via the Timer Settings menu in the Extended Menus.

3.3 Editing


The Editing Mode is entered by pressing the navigation wheel while the cursor is pointing to a line containing an editable field. Pressing the wheel again cause the new value to be saved and the keypad/display to leave the edit mode and return to the navigation mode.

3.4 Mobile app HMI

The Daikin mAP mobile app HMI is provided for free and aims to simplify the interaction with this Daikin product. The app can be downloaded from the official stores with the following links (scan the QR code to access directly the download pages on the stores).


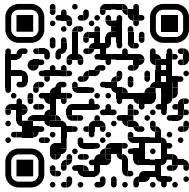


iOS

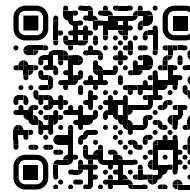



Android

To use the app is needed to pre-register an account and gain access to the specific unit to access. The access will be granted per unit base. A user can access multiple units after the app-tenant authorize this access. The procedure to register an account is in app. It's necessary to follow the sign in link in the app:

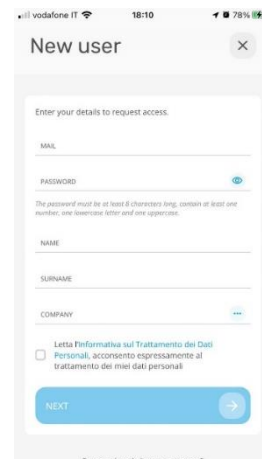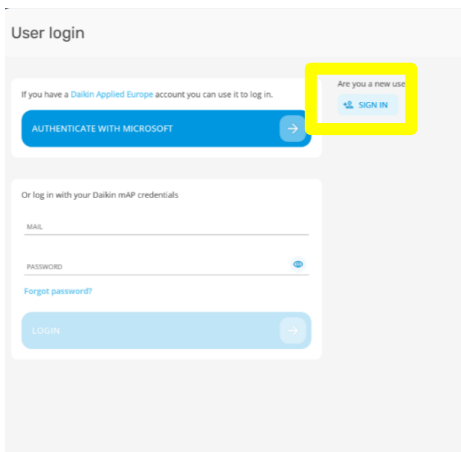

The mobile app will allow you to monitor all the relevant data, change the user related settings, trend data, update chiller software and more to come.

App layout will adapt based on the device where the app is running and will look as follows:

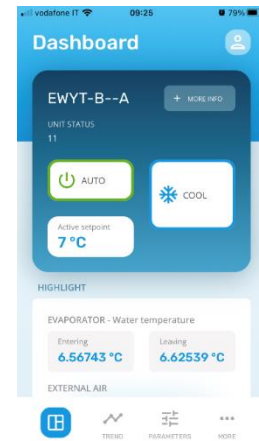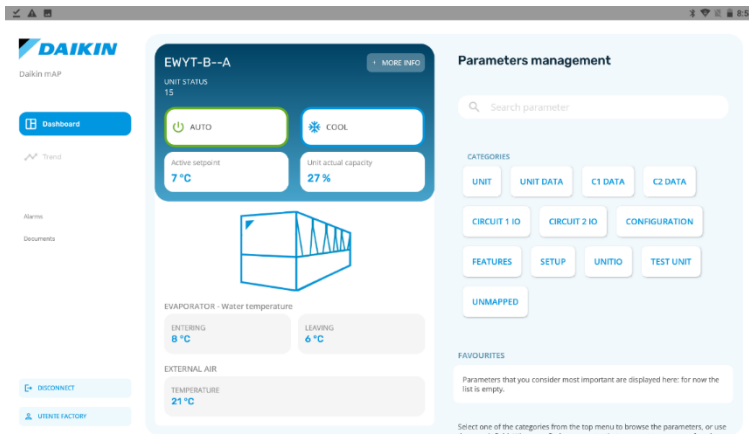

For further information consult the Quick Guide Daikin Map 1.0 □ D-EPMAP00101-23_EN

3.5 Basic Control System Diagnostic

Microtech IV controller, extension modules and communication modules are equipped with two status LED (BSP and BUS) to indicate the operational status of the devices. The BUS LED indicates the status of the communication with the controller. The meaning of the two status LED is indicated below.

Main Controller (UC)

BSP LED	Mode
Solid Green	Application running
Solid Yellow	Application loaded but not running (*) or BSP Upgrade mode active
Solid Red	Hardware Error (*)
Flashing Green	BSP startup phase. The controller needs time for starting.
Flashing Yellow	Application not loaded (*)
Flashing Yellow/Red	Fail safe mode (in case that the BSP upgrade was interrupted)
Flashing Red	BSP Error (software error*)
Flashing Red/Green	Application/BSP update or initialization

(*) Contact Service.

Extension modules

BSP LED	Mode	BUS LED	Mode
Solid Green	BSP running	Solid Green	Communication running, I/O working
Solid Red	Hardware Error (*)	Solid Red	Communication down (*)
Flashing Red	BSP Error (*)	Solid Yellow	Communication running but parameter from the application wrong or missing, or uncorrect factory calibration
Flashing Red/Green	BSP upgrade mode		

Communication modules

BSP LED (same for all modules)

BSP LED	Mode
Solid Green	BPS running, communication with controller
Solid Yellow	BSP running, no communication with controller (*)
Solid Red	Hardware Error (*)
Flashing Red	BSP Error (*)
Flashing Red/Green	Application/BSP update

(*) Contact Service.

BUS LED

BUS LED	LON	Bacnet MSTP	Bacnet IP	Modbus
Solid Green	Ready for Communication. (All Parameter loaded, Neuron configured). Doesn't indicate a communication with other devices.	Ready for Communication. The BACnet Server is started. It doesn't indicate an active communication	Ready for Communication. The BACnet Server is started. It doesn't indicate an active communication	All Communication running

BUS LED	LON	Bacnet MSTP	Bacnet IP	Modbus
Solid Yellow	Startup	Startup	Startup. The LED stays yellow until the module receives a IP Address, therefore a link must be established.	Startup, or one configured channel not communicating to the Master
Solid Red	No Communication to Neuron (internal error, could be solved by downloading a new LON application)	BACnet Server down. Automatically a restart after 3 seconds are initiated.	BACnet Server down. Automatic restart after 3 seconds is initiated.	All configured Communications down. Means no communication to the Master. The timeout can be configured. In case that the timeout is zero the timeout is disabled.
Flashing Yellow	Communication not possible to the Neuron. The Neuron must be configured and set online over the LON Tool.			

3.6 Controller maintenance

The controller requires to maintain the installed battery. Every two years it's required to replace the battery. Battery model is: BR2032 and it is produced by many different vendors.

To replace the battery remove the plastic cover of the controller display using a screw driver as shown in the following pictures:




Be careful to avoid damages to the plastic cover. The new battery shall be placed in the proper battery holder which is highlighted in the picture, respecting the polarities indicated into the holder itself.


3.7 Optional Remote User Interface

As an option an external Remote HMI can be connected on the UC. The Remote HMI offers the same features as the inbuilt display plus the alarm indication done with a light emitting diode located below the bell button.

All viewing and setpoint adjustments available on the unit controller are available on the remote panel. Navigation is identical to the unit controller as described in this manual.

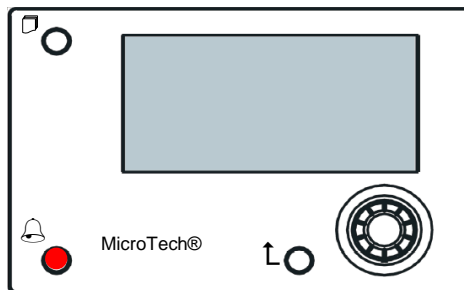

The Remote HMI can be extended up to 700m using the process bus connection available on the UC. With a daisy-chain connection as below, a single HMI can be connected to up to 8 units. Refer to the specific HMI manual for details.

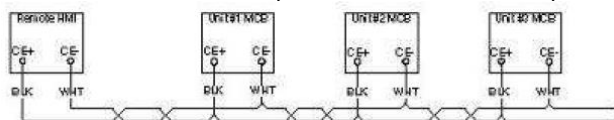

3.8 Embedded Web Interface

The Microtech IV controller has an embedded web interface that can be used to monitor the unit when connected to a local network. It is possible to configure the IP addressing of the Microtech IV as a fixed IP or DHCP depending on the network configuration.

With a common web browser a PC can connect with the unit controller entering the IP address of the controller or the host name, both visible in the "About Chiller" page accessible without entering a password.

When connected, it will be required to enter a user name and a password. Enter the following credential to get access to the web interface:

User Name: Daikin

Password: Daikin@web



Esegui l'accesso per accedere a questo sito

Autorizzazione richiesta da http://192.168.1.42
La tua connessione a questo sito non è sicura

Nome utente

Password

The Main Menu page will be displayed. The page is a copy of the onboard HMI and follows the same rules in terms of access levels and structure.

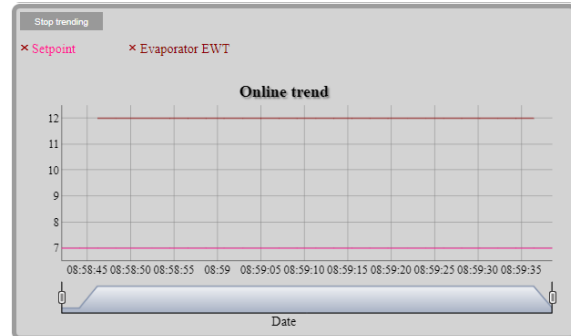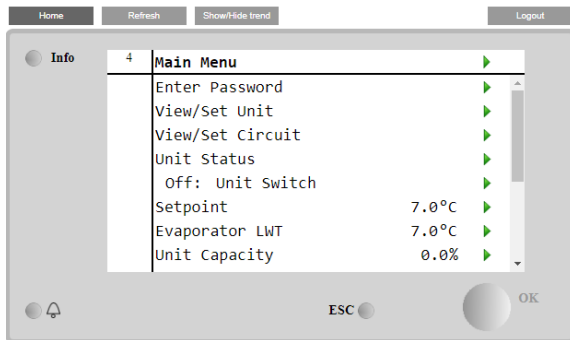

In addition it allows to trend log a maximum of 5 different quantities. It's required to click on the value of the quantity to monitor and the following additional screen will become visible:

Depending on the web browser and its version the trend log feature may not be visible. It's required a web browser supporting HTML 5 like for example:


- Microsoft Internet Explorer v.11,
- Google Chrome v.37,
- Mozilla Firefox v.32.

These software are only an example of the browser supported and the versions indicated have to be intended as minimum versions.

4 WORKING WITH THIS UNIT

4.1 Chiller On/Off

Starting from factory setup, unit On/Off can be managed by the user using the selector **Q0**, placed in the electrical panel, which can switch between three positions: **0 – Local – Remote**.



0 Unit is disabled



Loc (Local) Unit is enabled to start the compressors



Rem (Remote) Unit On/Off is managed through the “Remote On/Off” physical contact.
Closed contact means unit enabled.
Opened contact means unit disabled.
Refer to the electrical wiring diagram, Field Wiring Connection page, to find the references about Remote On/Off contact. Generally, this contact is used to bring out from the electrical panel the on/off selector.

Some chiller models can be equipped with additional selectors **Q1 - Q2** used to enable or disabled specific refrigerant circuit.



0 Circuit 1 is disabled.





1 Circuit 1 is enabled.

Unit controller provides also additional software features to manage unit start/stop, that are set by default to allow unit start:



1. Keypad On/Off
2. Scheduler (Time programmed On/Off)
3. Network On/Off (optional with communication modules)

4.1.1 Keypad On/Off

In the main page, scroll down until **Unit Enable** menu, where are available all settings to manage unit and circuits start/stop.

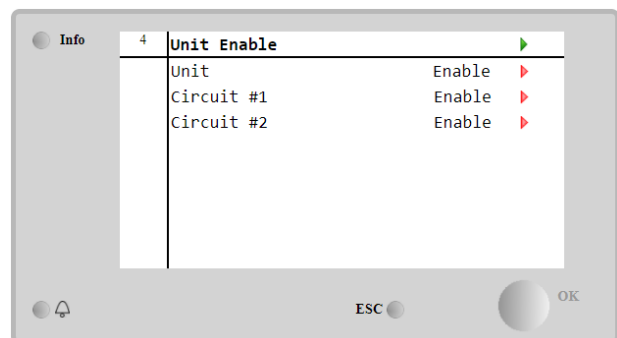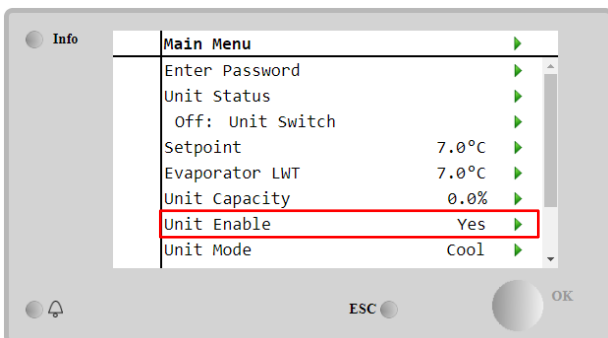

Parameter	Range	Description
Unit	Disable	Unit disabled
	Enable	Unit enabled
	Scheduler	Unit start/stop can be time programmed for each weekday
Circuit #X	Disable	Circuit #X disabled
	Enable	Circuit #X enabled
	Test	Circuit #X in test mode. This feature has to be used only from trained person or Daikin service

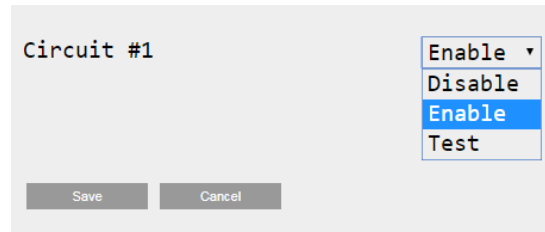
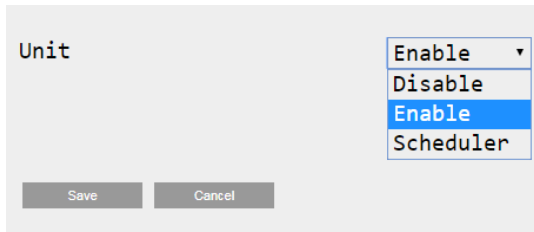


4.1.2 Scheduler and Silent mode functionalities



The Scheduler function can be used when is required an automatic chiller start/stop programming. To use this function, follow below instructions:

1. Q0 selector = Local (refer to 4.1)
2. Unit Enable = Scheduler (refer to 4.1.1)
3. Controller date and time properly set (refer to 4.7)

Scheduler programming is available going in **Main Page → View/Set Unit → Scheduler** menu

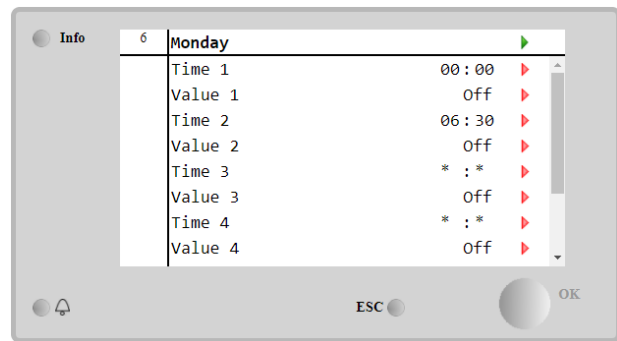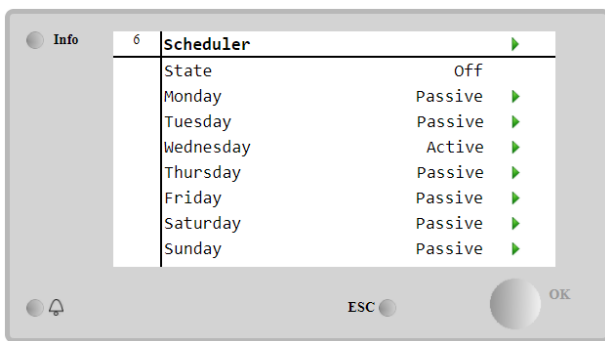

For each weekday can be programmed up to six time bands with a specific operating mode. First operating mode starts at Time 1, ends at Time 2 when will start the second operating mode and so on until the latest.

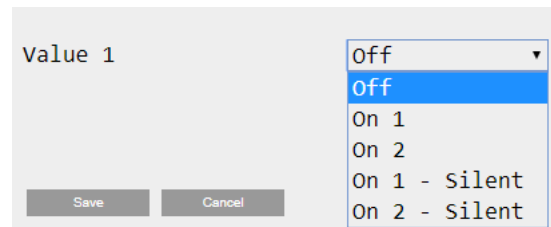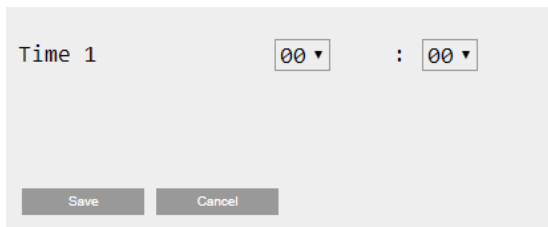

Depending on unit type, different operating modes are available:

Parameter	Range	Description
Value 1	Off	Unit disabled
	On 1	Unit enabled – Water setpoint 1 selected
	On 2	Unit enabled – Water setpoint 2 selected
	On 1 - Silent	Unit enabled – Water setpoint 1 selected – Fan silent mode enabled
	On 2 - Silent	Unit enabled – Water setpoint 2 selected – Fan silent mode enabled

When the **Fan Silent Mode** function is enabled the chiller noise level is reduced decreasing the maximum speed allowed for fans. Following table reports how much maximum speed is decreased for the different unit types.

Unit noise class	Normal maximum fan speed [rpm]	Silent mode maximum fan speed [rpm]
Standard	900	700
Low	900	700
Reduced	700	500



All data reported in the table, will be respected only if the chiller is operating within its operating limits.

The Fan Silent Mode function can be enabled only for units equipped with VFD fans.



4.1.3 Network On/Off

Chiller On/Off can be managed also with serial protocol, if the unit controller is equipped with one or more communication modules (BACNet, Modbus or LON). In order to control the unit over the network, follow below instructions:

1. Q0 selector = Local (refer to 4.1)
2. Unit Enable = Enable (refer to 4.1.1)
3. Control Source = Network (refer to 4.5)
4. Close the contact Local/Network Switch (refer to 4.5), when required!

4.2 Water Setpoints

Purpose of this unit is to cool or to heat (in case of heat pump) the water temperature, to the setpoint value defined by the user and displayed in the main page:

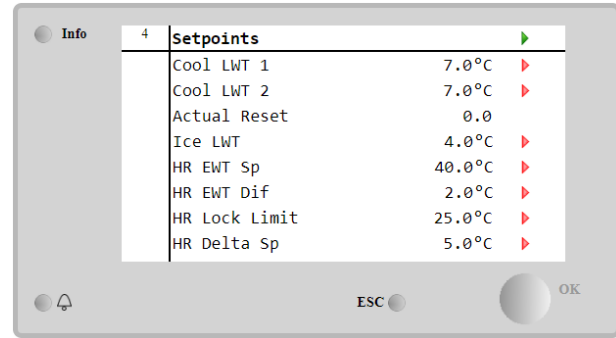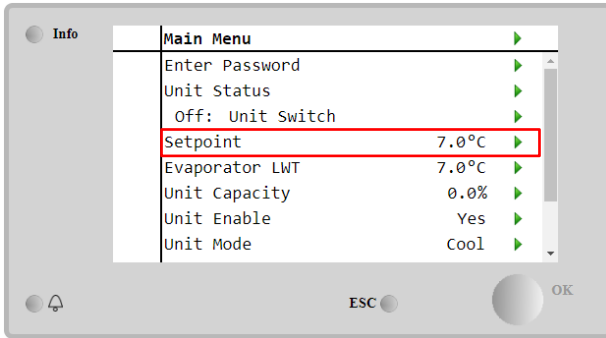

The unit can work with a primary or a secondary setpoint, that can be managed as indicated below:

1. Keypad selection + Double Setpoint digital contact
2. Keypad selection + Scheduler Configuration
3. Network
4. Setpoint Reset function

As first step the primary and secondary setpoints need to be defined. From main menu, with user password, press on **Setpoint**.

Parameter	Range	Description
Cool LWT 1	Ranges of the Cool, Heat, Ice setpoint are reported in the IOM of every specific unit.	Primary cooling setpoint.
Cool LWT 2		Secondary cooling setpoint.
Actual Reset		This item is visible only when the Setpoint Reset function is enabled and it shows the actual reset applied to the basic setpoint
Heat LWT 1		Primary heating setpoint.
Heat LWT 2		Secondary heating setpoint.
Ice LWT		Setpoint for Ice mode.

The change between primary and secondary setpoint can be performed using the Double setpoint contact, always available in the user terminal box, or through the Scheduler function.

Double setpoint contact works as below:

- Contact opened, the primary setpoint is selected
- Contact closed, the secondary setpoint is selected

In order to change between primary and secondary setpoint with the Scheduler, refer to the section 4.1.2.



When the scheduler function is enabled, the Double setpoint contact is ignored





When the operating mode Cool/Ice w/Glycol is selected, the Double Setpoint contact will be used to switch between the Cool and Ice mode, producing no change on the active setpoint

To modify the active setpoint through network connection, refer to Network control section 4.5.

The active setpoint can further modified using the Setpoint Reset function as explained in the section 4.10.2.

4.3 Unit Mode

The Unit Mode is used to define if the chiller is working to produce chilled or heated water. Current mode is reported in the main page to the item Unit Mode.

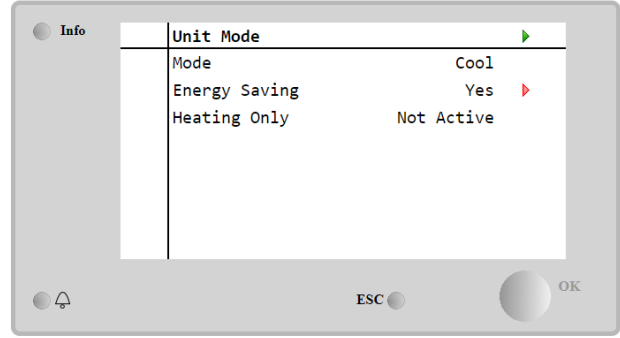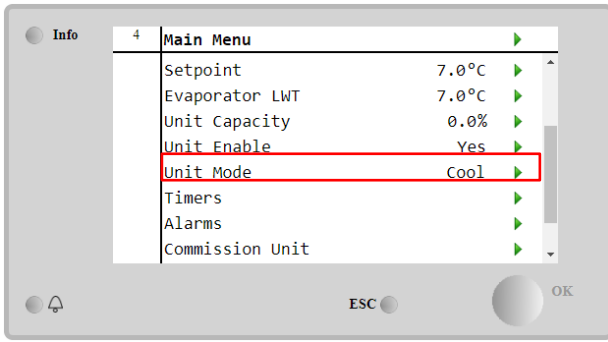

Depending on the unit type, different operating modes can be selected entering, with maintenance password, in the **Unit Mode** menu. In the table below are listed and explained all modes.

Parameter	Range	Description	Unit Range
Mode	Cool	Set if chilled water temperature up to 4°C is required. No glycol is generally needed in the water circuit, unless ambient temperature may reach low values.	A/C
	Cool w/Glycol	Set if chilled water temperature below 4°C is required. This operation requires proper glycol/water mixture in the evaporator water circuit.	A/C
	Cool/Ice w/Glycol	Set in case a dual cool/ice mode is required. The switch between the two modes is performed using the contact physical Double Setpoint. Double Setpoint opened: the chiller will work in cooling mode with the Cool LWT being as the Active Setpoint. Double Setpoint closed: The chiller will work in Ice mode with the Ice LWT as the Active Setpoint.	A/C
	Ice w/Glycol	Set if Ice storage is required. The application requires the compressors to operate at full load until the ice bank is completed, and then to stop for at least 12 hours. In this mode the compressor(s) will not operate at part load, but will work only in on/off mode.	A/C
<i>The following modes allow to switch the unit between heat mode and one of the previous cool mode (Cool, Cool w/Glycol, Ice)</i>			
	Heat/Cool	Set in case a dual cool/heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box. <ul style="list-style-type: none"> Switch COOL: The chiller will work in cooling mode with the Cool LWT as the Active Setpoint. Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint. 	Heat Pump Only
	Heat/Cool w/Glycol	Set in case a dual cool/heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box. <ul style="list-style-type: none"> Switch COOL: The chiller will work in cooling mode with the Cool LWT as the Active Setpoint. Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint. 	A/C
	Heat/Ice w/Glycol	Set in case a dual Ice/Heat mode is required. This setting implies an operation with double functioning which is activated through the Cool/Heat switch on the electric box. <ul style="list-style-type: none"> Switch ICE: The chiller will work in cooling mode with the Ice LWT as the Active Setpoint. Switch HEAT: The chiller will work in heat pump mode with the Heat LWT as the Active Setpoint. 	A/C
	Test	Enables the Manual Control of the unit. The manual test feature helps in debugging and checking the operational status of actuators. This feature is accessible only with the maintenance password in the main menu. To activate the test feature is required to disable the Unit from the Q0 switch and change the available mode to Test.	A/C
Energy Saving	No, Yes	Disable/Enable of the energy saving function	
Heating Only	Not Active, Active	Indicates if the unit can work ONLY in heating mode or not	Heat Pump only

Like the On/Off and setpoint control, also the unit mode can be modified from network. Refer to Network control section 4.5 for more details.

4.3.1 Heat/Cool Switch (Heat Pump Only)

Starting from factory setup, Heat mode switch can be managed by the user using the selector **QHP**, placed in the electrical panel, which can switch between three positions: **0 – 1**.



Chiller Unit will work in Cooling Mode



LOC (Local) Unit will work in Heating mode



Rem (Remote) Unit Operating mode is managed through the “Remote” control through BMS communication.



In order to enable the Heat mode, the Unit mode must be set in “Heat/Cool” mode, and the QHP switch must be set in Loc position.

4.3.2 Energy Saving mode

Some unit types provide the possibility to enable an energy saving function, that reduces the power consumption deactivating the compressors crankcase heater, when the chiller is Disabled.

This mode implies that the time needed to start the compressors, after an Off period, could be delayed until a maximum of 90 minutes.

For time critical application, the energy saving function can be disabled by the user to ensure the compressor start within 1 minute from unit On command.

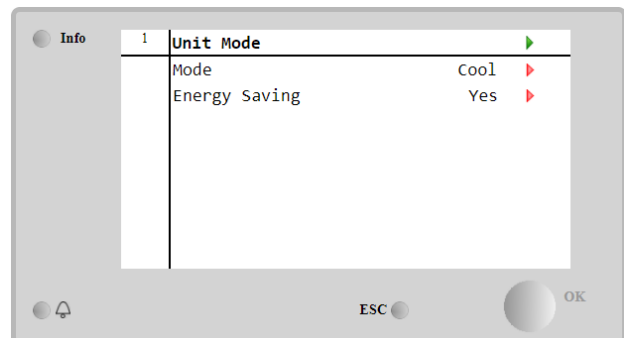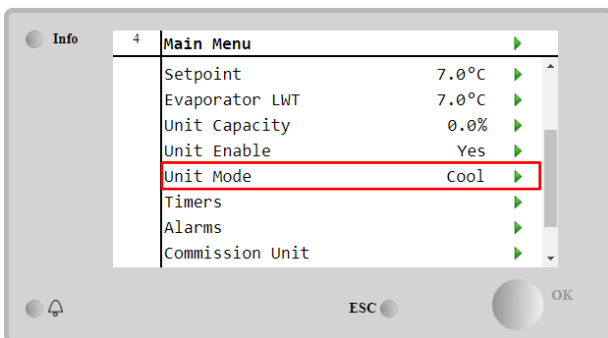

4.4 Unit Status

Unit controller provides in the main page some information about chiller status. All chiller states are listed and explained below:

Parameter	Overall status	Specific status	Description
Unit Status	Auto:		Unit is in Auto control. The pump is running and at least one compressor is running.
		wait For Load	Unit is in standby because the thermostatic control satisfies the active setpoint.
		water Recirc	Water pump is running in order to equalize the water temperature in the evaporator.
		wait For Flow	Unit pump is running but the flow signal still indicates a lack of flow through the evaporator.
		Max Pulldown	Unit thermostatic control is limiting the unit capacity as the water temperature is dropping too quickly.
		Capacity Limit	Demand limit has been hit. Unit capacity will not further increase.
		Current Limit	Maximum current has been hit. Unit capacity will not further increase.
		Silent Mode	Unit is running and Silent Mode is enabled
	Off:	Master Disable	Unit is disabled by the Master Slave function



	Ice Mode Timer	This status can be shown only if the unit can work in Ice Mode. The unit is off because the Ice setpoint has been satisfied. Unit will remain off until the Ice Timer has expired.
	OAT Lockout	The unit cannot run because the Outside Air Temperature is below the limit foreseen for the condenser temperature control system installed in this Unit. If the Unit has to run anyway, check with your local maintenance how to proceed.
	Circuits Disabled	No circuit is available to run. All circuits can be disabled by their individual enable switch or can be disabled by a component safety condition active or can be disabled by keypad or can be all in alarms. Check the individual circuit status for further details.
	Unit Alarm	A unit alarm is active. Check the alarm list to see what is the active alarm inhibiting the unit to start and check if the alarm can be cleared. Refer to section 5. before proceeding.
	Keypad Disable	The Unit has been disabled by keypad. Check with your local maintenance if it can be enabled.
	Network Disabled	Unit is disabled by Network.
	Unit Switch	The Q0 selector is set to 0 or the or the Remote On/Off contact is opened.
	Test	Unit mode set to Test. This mode is activated to check operability of onboard actuators and sensors. Check with the local maintenance if the Mode can be reverted to the one compatible with unit application (View/Set Unit – Set-Up – Available Modes).
	Scheduler Disable	Unit is disabled by Scheduler programming
	Pumpdown	Unit is performing the pumpdown procedure and it will stop within few minutes

4.5 Network Control

When the unit controller is equipped with one or more communication modules the **Network Control** feature can be enabled, which gives the possibility to control the unit via serial protocol (Modbus, BACNet or LON).

To allow unit's control from network, follow below instructions:

1. Close the physical contact "Local/Network Switch". Refer to unit electrical wiring diagram, Field Wiring Connection page, to find the references about this contact.
2. Go to Main Page → View/Set Unit → Network Control
Set Controls Source = Network

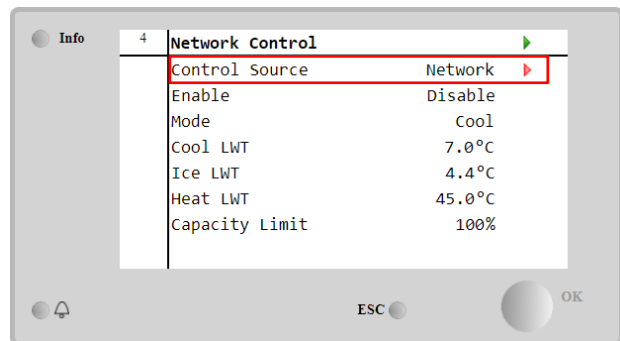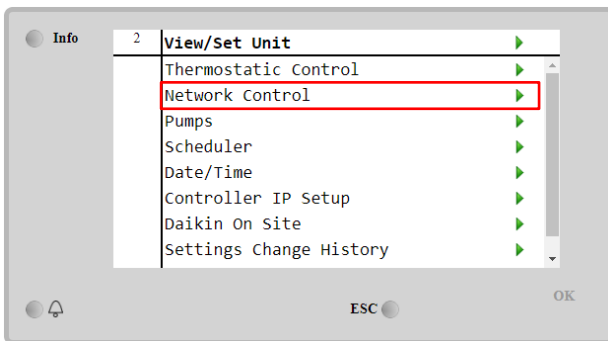

Network Control menu returns all main values received from serial protocol.

Parameter	Range	Description
Control Source	Local	Network control disabled
	Network	Network control enabled
Enable	-	On/Off command from network
Mode	-	Operating mode from network
Cool LWT	-	Cooling water temperature setpoint from network
Ice LWT	-	Ice water temperature setpoint from network
Heat LWT	-	Heating water temperature setpoint from network
FreeCooling	Enable/Disable	On/Off command from network
Capacity Limit	-	Capacity limitation from network

Refer to communication protocol documentation for specific registers addresses and the related read/write access level.


4.6 Thermostatic Control

Thermostatic control settings allow to set up the response to temperature variations. Default settings are valid for most application, however plant specific conditions may require adjustments in order to have a smooth control or a quicker response of the unit.



The control will start the first compressor if the controlled temperature is higher (Cool Mode) or lower (Heat Mode) than the active setpoint of at least a Start Up DT value, whereas other compressors are started, step by step, if the controlled temperature is higher (Cool Mode) or lower (Heat Mode) than the active setpoint (AS) of at least a Stage Up DT (SU) value. Compressors stop if performed following same procedure looking to the parameters Stage Down DT and Shut Down DT.

	Cool Mode	Heat Mode
First compressor start	Controlled Temperature > Setpoint + Start Up DT	Controlled Temperature < Setpoint - Start Up DT
Other compressors start	Controlled Temperature > Setpoint + Stage Up DT	Controlled Temperature < Setpoint - Stage Up DT
Last compressor stop	Controlled Temperature < Setpoint - Shut Dn DT	Controlled Temperature > Setpoint - Shut Dn DT
Other compressors stop	Controlled Temperature < Setpoint - Stage Dn DT	Controlled Temperature > Setpoint - Stage Dn DT

A qualitative example of compressors start-up sequence in cool mode operation is shown in the graph below.

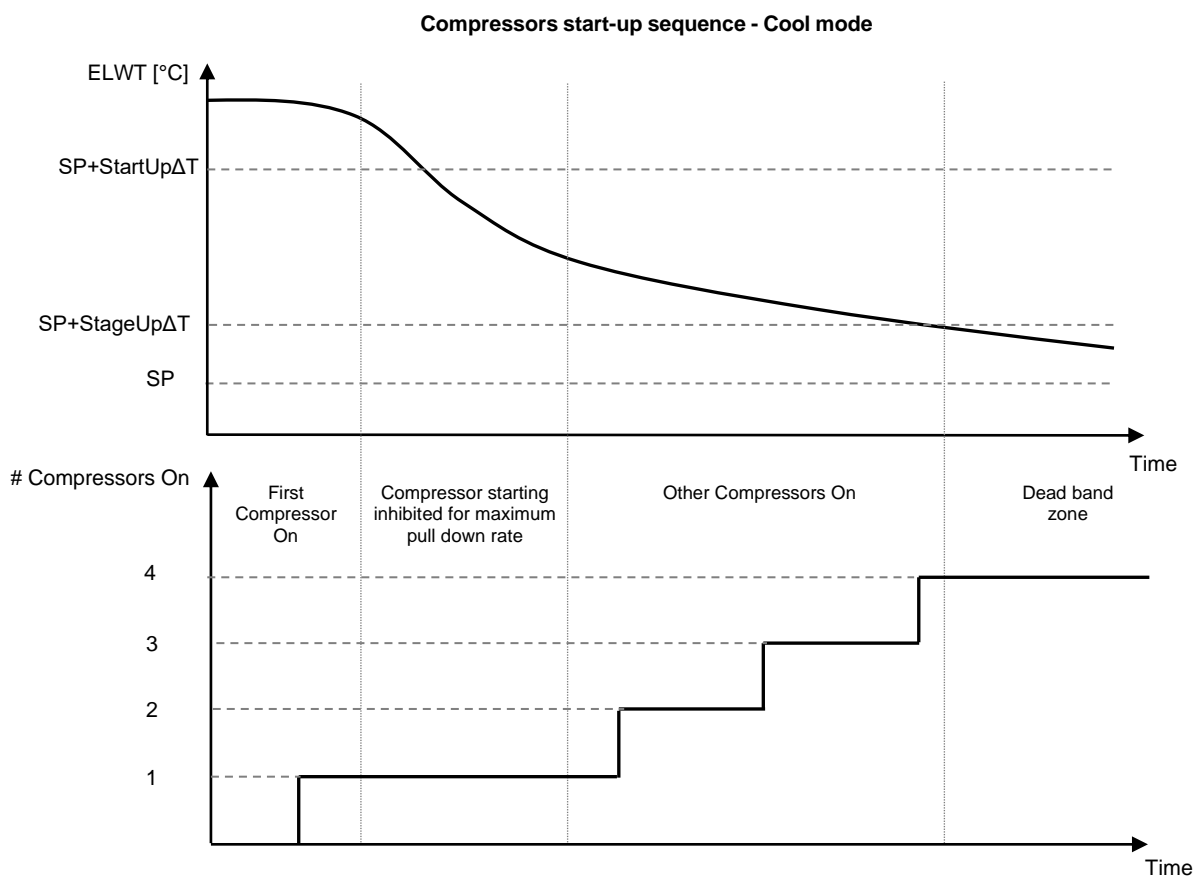

Thermostatic control settings are accessible from Main Page → Thermostatic Control

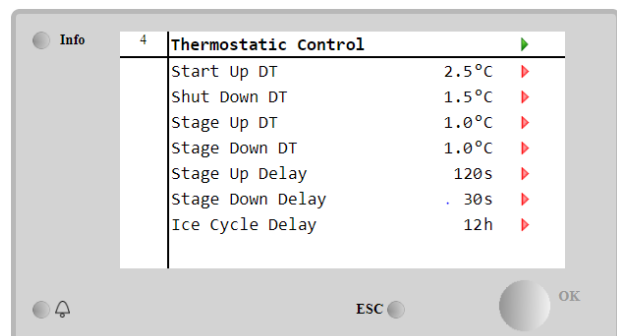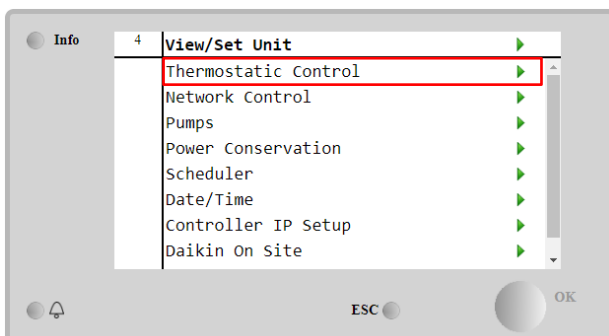



Parameter	Range	Description
Start Up DT	0.5-8°C	Delta temperature respect the active setpoint to start the unit (startup of first compressor)
Shut Down DT	0.5-3°C	Delta temperature respect the active setpoint to stop the unit (shutdown of latest compressor)
Stage Up DT	0.5-2.5°C	Delta temperature respect the active setpoint to start a compressor
Stage Down DT	0.5-1.5°C	Delta temperature respect the active setpoint to stop a compressor
Stage Up Delay	2-8 min	Minimum time between the compressors startup
Stage Down Delay	10-60 s	Minimum time between the compressors shutdown
Ice Cycle Delay	1-23 h	Unit standby period during Ice mode operation

4.7 Date/Time

The unit controller is able to take stored the actual date and time, that are used for:

1. Scheduler
2. Cycling of standby chiller with Master Slave configuration
3. Alarms Log

Date and time can be modified going in **View/Set Unit → Date/Time**

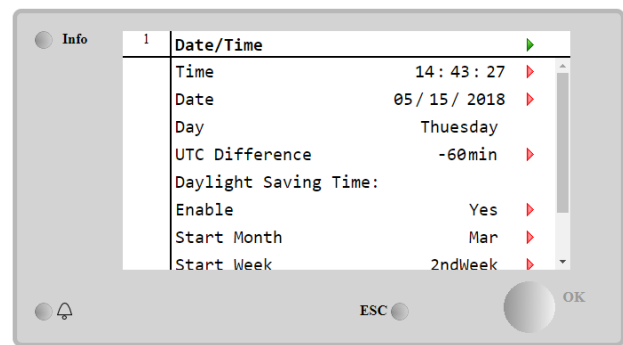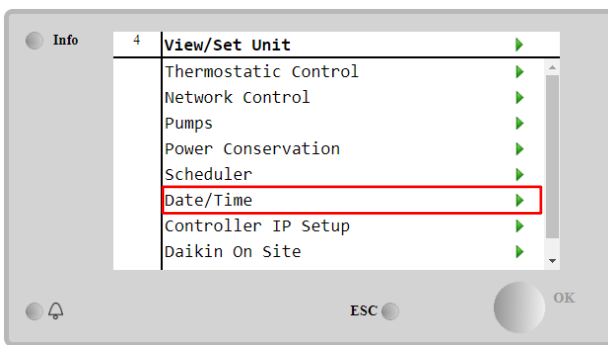



Parameter	Range	Description
Time		Actual date. Press to modify. Format is hh:mm:ss
Date		Actual time. Press to modify. Format is mm/dd/yy
Day		Returns the day of the week.
UTC Difference		Coordinated universal time.
Daylight Saving Time:		
Enable	No, Yes	It is used to enable/disable the automatic switch of the Daylight Saving Time
Start Month	NA, Jan...Dec	DayLight Saving time start month
Start week	1st...5th week	DayLight Saving time start week
End Month	NA, Jan...Dec	DayLight Saving time end month
End week	1st...5th week	DayLight Saving time end week



Remember to check periodically the controller battery in order to maintain updated date and time even when there is no electrical power. Refer to controller maintenance section

4.8 Pumps

The UC can manage one or two water pumps. Number of pumps and their priority can be set from **Main Page → View/Set Unit → Pumps**.

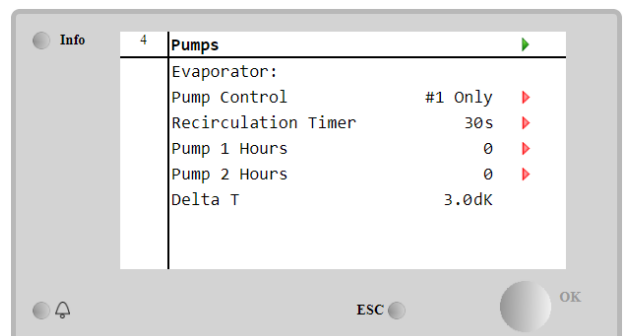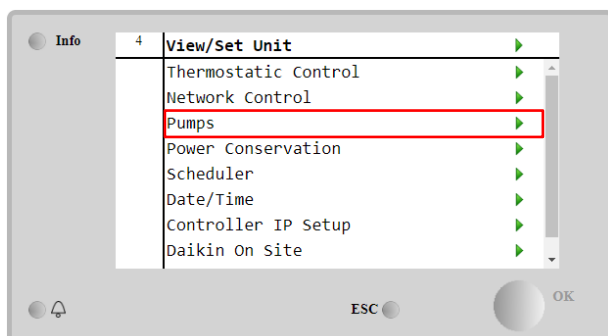



Parameter	Range	Description
Pump Control	#1 Only	Set to this in case of single pump or twin pump with only #1 operational (f.e. in case of maintenance on #2)
	#2 Only	Set to this in case of twin pump with only #2 operational (f.e. in case of maintenance on #1)
	Auto	Set for automatic pump start management. At each chiller start, the pump with the least number of hours will be
	#1 Primary	Set to this in case of twin pump with #1 running and #2 as a backup
	#2 Primary	Set to this in case of twin pump with #2 running and #1 as a backup
Recirculation Timer		Minimum time required within flow switch has to in order to allow unit startup
Pump 1 Hours		Pump 1 running hours
Pump 2 Hours		Pump 2 running hours

4.9 External Alarm

The External Alarm is a digital contact that can be used to communicate to the UC an abnormal condition, coming from an external device connected to the unit. This contact is located in the customer terminal box and depending on the configuration can causes a simple event in the alarm log or also the unit stop. The alarm logic associated to the contact is the following:

Contact state	Alarm State	Note
Opened	Alarm	The alarm is generated if the contact remains opened for at least 5 seconds
Closed	No Alarm	The alarm is reset just the contact is closed

The configuration is performed from the **Commissioning → Configuration → Options** menu

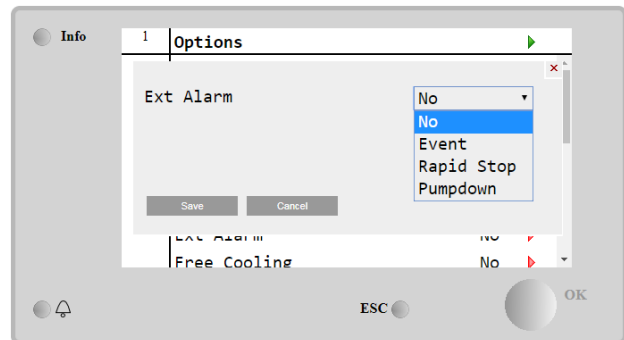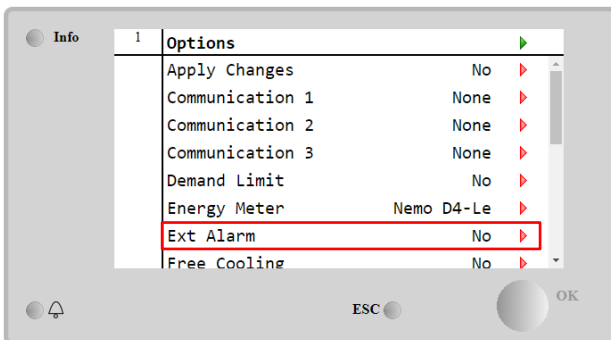

Parameter	Range	Description
Ext Alarm	Event	Event configuration generates an alarm in the controller but takes the unit running
	Rapid Stop	Rapid Stop configuration generates an alarm in the controller and performs a rapid stop of the unit
	Pumpdown	Pumpdown configuration generates an alarm in the controller and performs a pumpdown procedure to stop the unit.


4.10 Power Conservation

In this chapters will be explained the functions used to reduce the unit power consumption:

1. Demand Limit
2. Setpoint Reset

4.10.1 Demand Limit

The "Demand limit" function allows the unit to be limited to a specified maximum load. Capacity limit level is regulated using an external 4-20 mA signal with a linear relationship shown in the picture below. A signal of 4 mA indicates the maximum capacity available whereas a signal of 20 mA indicates the minimum capacity available. In order to enable this option, go to Main Menu → Commission Unit → Configuration → Options and set the Demand Limit parameter to Yes.

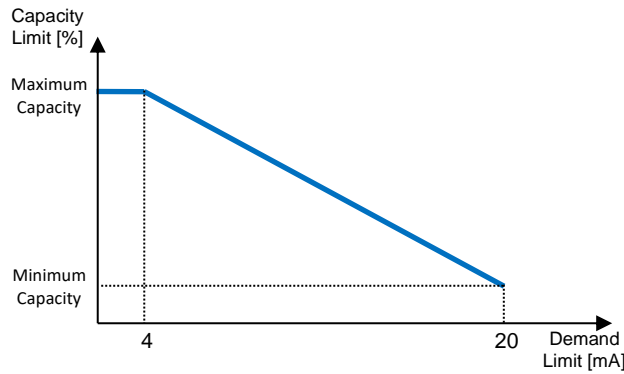


Graph 1 Demand Limit[mA] vs Capacity Limit[%]

It is worth pointing out that it is not possible to shut down the unit using the demand limit function, but only to unload it to its minimum capacity.

Note that this function does a real capacity limitation only if the unit is equipped with Screw compressors. In case of Scroll compressors, the demand limit operates a discretization of the overall unit capacity according to the actual number of compressors, and, depending on the external signal value, it enables only a subset of the total number of compressors, as shown in table below:

Number of Compressor	Demand Limit Signal [mA]	Maximum number of compressors On
4	4 < < 8	4
	8 < < 12	3
	12 < < 16	2
	16 < < 20	1
5	4 < < 7.2	5
	7.2 < < 10.4	4
	10.4 < < 13.6	3
	13.6 < < 16.8	2
6	16.8 < < 20.0	1
	4 < < 6.7	6
	6.7 < < 9.3	5
	9.3 < < 12	4
	12 < < 14.7	3
6	14.7 < < 17.3	2
	17.3 < < 20	1

All info about this function are reported in the **Main Menu → Commission Unit → Configuration → Options → Demand Limit** page.


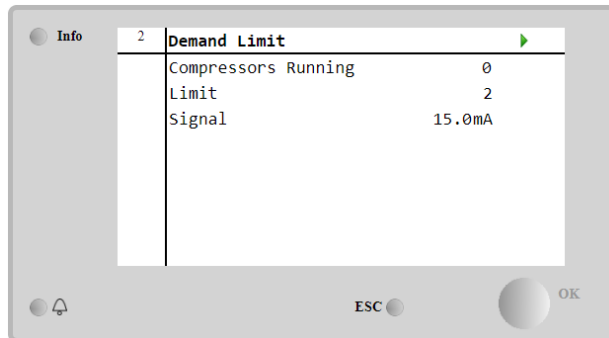


4.10.2 Setpoint Reset

The “Setpoint Reset” function is able to override the chilled water temperature active setpoint when certain circumstances occur. The aim of this function is to reduce the unit energy consumption whilst maintaining the same comfort level. To this purpose, three different control strategies are available:

- Setpoint Reset by Outside Air Temperature (OAT)
- Setpoint Reset by an external signal (4-20mA)
- Setpoint Reset by Evaporator ΔT (EWT)

In order to set the desired setpoint-reset strategy, go to **Main Menu → Commission Unit → Configuration → Options** and modify the **Setpoint Reset** parameter, according to the following table:

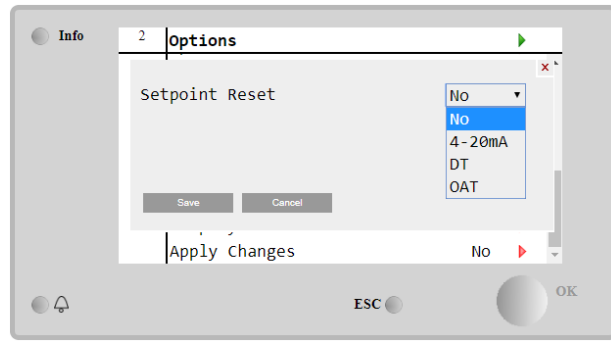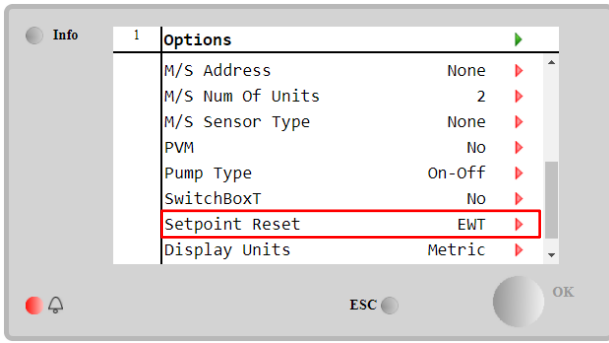


Parameter	Range	Description
LWT Reset	No	Setpoint reset not enabled
	4-20mA	Setpoint reset enabled by an external signal between 4 and 20mA
	DT	Setpoint reset enabled by Evaporator Water Temperature
	OAT	Setpoint reset enabled by Outside Air Temperature

Each strategy needs to be configured (although a default configuration is available) and its parameters can be set navigating to Main Menu → View/Set Unit → Power Conservation → Setpoint Reset.

Note that the parameters corresponding to a specific strategy will be available only once the Setpoint Reset has been set to a specific value and the UC has been restarted.


4.10.2.1 Setpoint Reset by OAT (A/C units only)

When the **OAT** is selected as Setpoint Reset option, the LWT active setpoint(AS) is calculated applying a correction to the basic setpoint that depends on the ambient temperature (OAT) and on the current Unit Mode (Heating mode or Cooling mode). Several parameters can be configured, and they are accessible from the Setpoint Reset menu, as shown below:

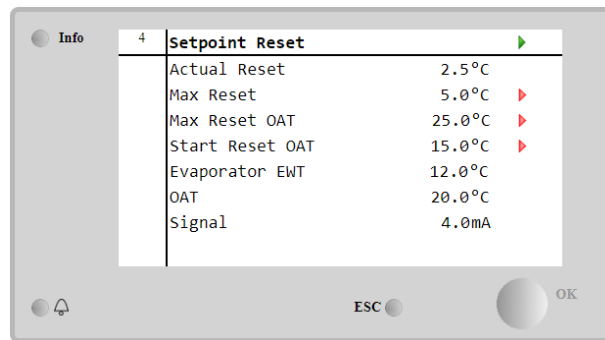

Parameter	Default	Range	Description
Actual Reset			Actual Reset shows which is the correction that will applied to the base setpoint
Max Reset (MR)	5.0°C	0.0°C÷10.0° C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the OAT option can cause on the LWT.
Max Reset OAT (MROAT)	15.5°C	10.0°C÷29.4° C	It represents the “threshold temperature” that correspond to the maximum setpoint variation.
Start OAT Reset (SROAT)	23.8°C	10.0°C÷29.4° C	It represents the “threshold temperature” of the OAT to activate the LWT setpoint reset, i.e. the LWT setpoint is overwritten only if the OAT reaches/overpasses the SROAT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset


Provided the unit is set in Cooling mode (Heating mode), the more the ambient temperature drops below (goes beyond) the SROAT, the more the LWT active setpoint (AS) is increased(decreased), until the OAT reaches the MROAT limit. When the OAT overpasses the MROAT, the active setpoint does not increase(decrease) anymore, and it remains stable to its maximum(minimum) value, i.e. AS = LWT + MR(-MR).

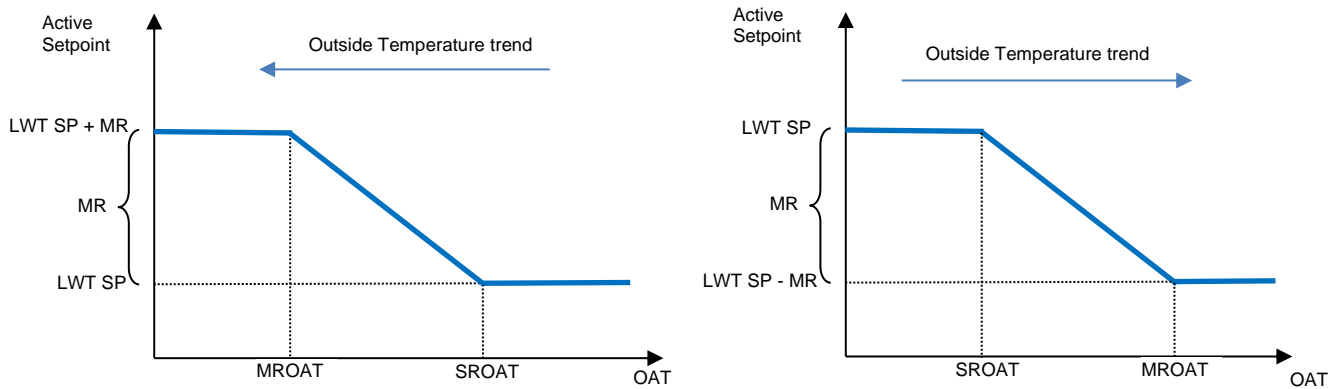


Graph 2 Outside Ambient Temperature vs Active Setpoint - Cooling mode(left)/ Heating mode(right)

4.10.2.2 Setpoint Reset by External 4-20mA signal

When the 4-20mA is selected as Setpoint Reset option, the LWT active setpoint(AS) is calculated applying a correction based on an external 4-20mA signal: 4 mA corresponds to 0°C correction, i.e. AS = LWT setpoint, whereas 20 mA corresponds to a correction of the Max Reset (MR) quantity, i.e. AS = LWT setpoint + MR(-MR) as shown in the following table:

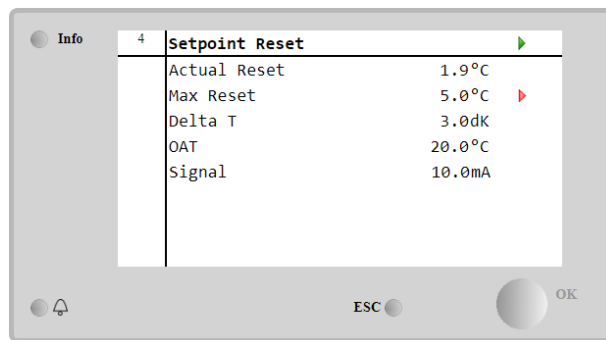



Parameter	Default	Range	Description
Actual Reset			Actual Reset shows which is the correction that will applied to the base setpoint
Max Reset (MR)	5.0 °C	0.0 °C ÷ 10.0 °C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the 4-20mA option can cause on the LWT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset

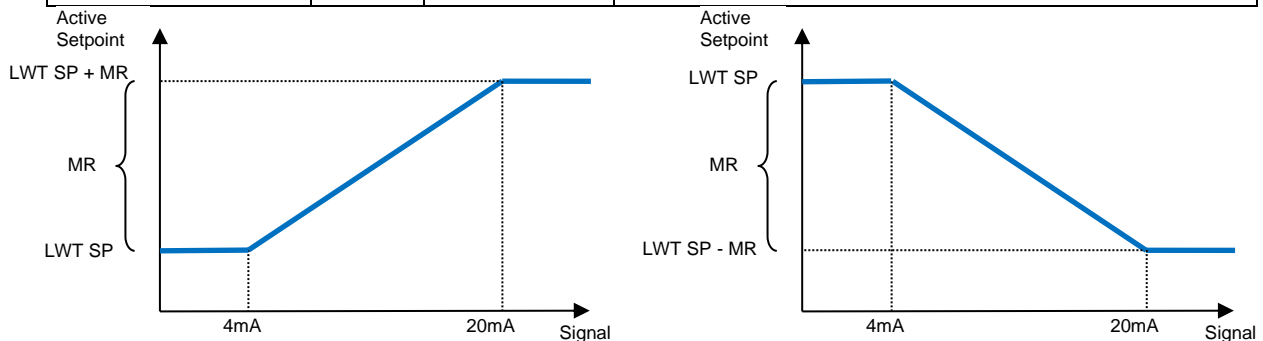

Graph 3 External signal 4-20mA vs Active Setpoint - Cooling mode(left)/ Heating mode(right)

4.10.2.3 Setpoint Reset by DT

When the DT is selected as Setpoint Reset option, the LWT active setpoint(AS) is calculated applying a correction based on the temperature difference ΔT between the leaving water temperature(LWT) and the evaporator entering(returning) water temperature (EWT). When the $|\Delta T|$ becomes smaller than the Start Reset ΔT setpoint(SR ΔT), the LWT active setpoint is proportionally increased (if Cooling mode set) or decreased (if Heating mode is set) of a maximum value equal to the Max Reset(MR) parameter.

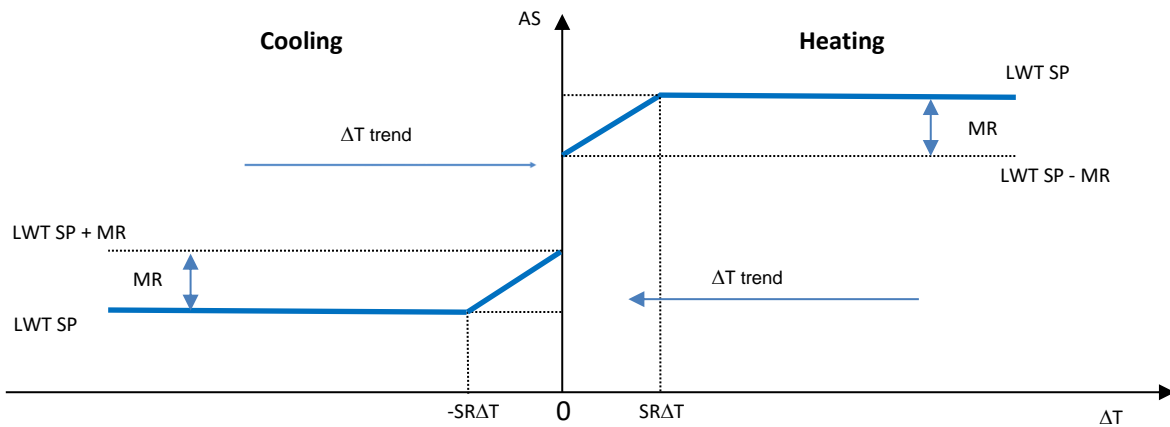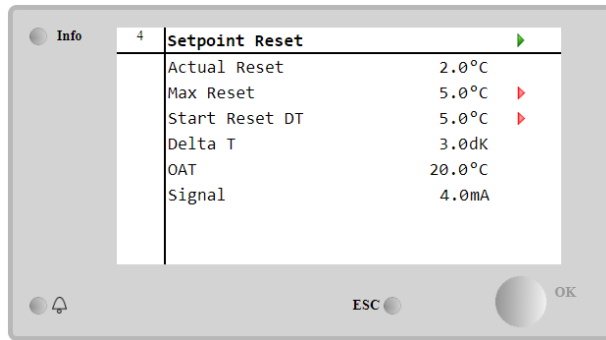



Graph 4 Evap ΔT vs Active Setpoint - Cooling mode(left)/ Heating mode(right)

Parameter	Default	Range	Description
Max Reset (MR)	5.0°C	0.0°C ÷ 10.0°C	Max Reset setpoint. It represents the maximum temperature variation that the selection of the EWT option can cause on the LWT.
Start Reset DT (SRΔT)	5.0°C	0.0°C ÷ 10.0°C	It represents the “threshold temperature” of the DT to activate the LWT setpoint reset, i.e. the LWT setpoint is overwritten only if the DT reaches/overpasses the SRΔT.
Delta T			Is the actual evaporator delta temperature. Entering – Leaving water temperature
OAT			Actual outside ambient temperature
Signal			Actual input current read on the terminals Setpoint Reset



4.11 Electrical Data

Unit controller returns main electrical values read by the energy meter Nemo D4-L or Nemo D4-Le. All data are collected in the menu Electrical Data.

Main Page → View/Set Unit → Electrical Data

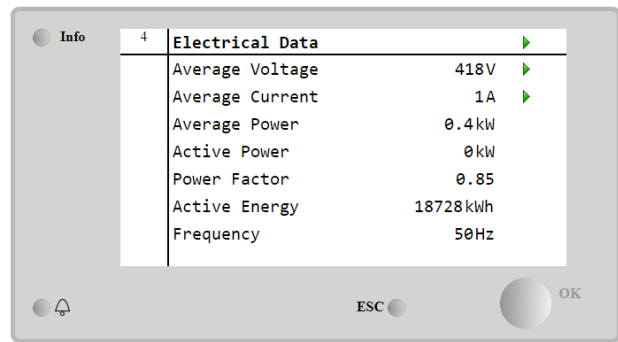
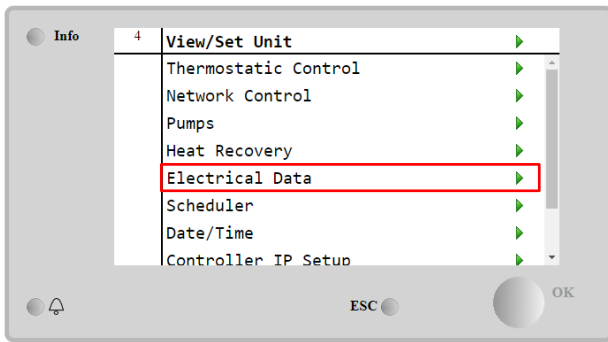


Parameter	Description
Average Voltage	Returns the average of the three chained voltages and links to the Voltage Data page
Average Current	Returns the current average and links to the Current Data page
Average Power	Returns the average power
Active Power	Returns the active power
Power Factor	Returns the power factor
Active Energy	Returns the active energy
Frequency	Returns the active frequency

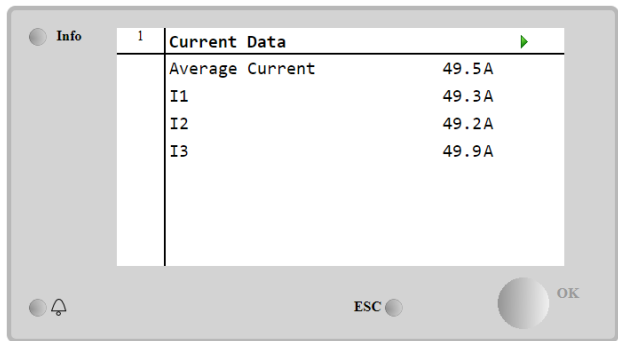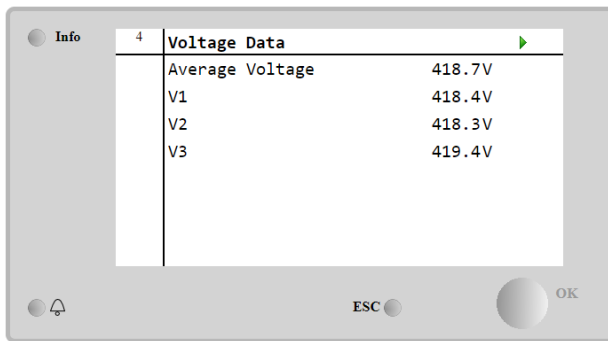

4.12 Controller IP Setup

The Controller IP Setup page is located at the path Main Menu → view/Set Unit → Controller IP Setup.

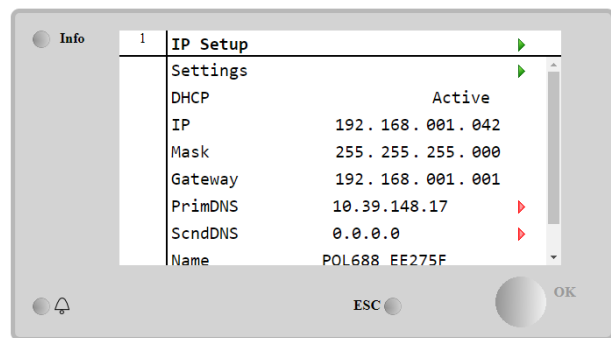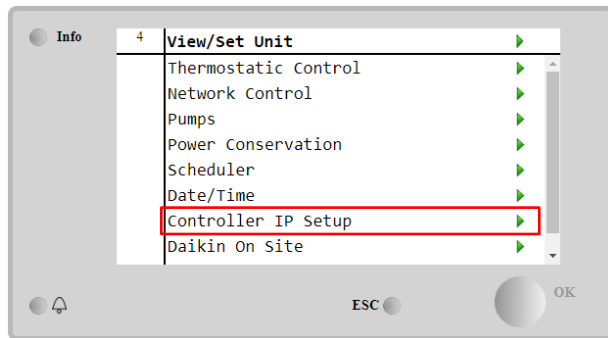



All of the information about current MT4 IP Network settings is reported in this page, as shown in the following table:

Parameter	Range	Description
DHCP	Active	The DHCP option is enabled.
	Passive	The DHCP option is disabled.
IP	xxx.xxx.xxx.xxx	The current IP address
Mask	xxx.xxx.xxx.xxx	The current Subnet Mask address.
Gateway	xxx.xxx.xxx.xxx	The current Gateway address.
PrimDNS	xxx.xxx.xxx.xxx	The current Primary DNS address.
ScndDNS	xxx.xxx.xxx.xxx	The current Secondary DNS address.
Device	POLxxx_xxxxxx	The Host Name of the MT4 controller.
MAC	xx-xx-xx-xx-xx-xx	The MAC address of the MT4 controller.

In order to modify the MT4 IP Network configuration, do the following operations:

- access the **Settings** menu

- set the DHCP option to Passive
- modify the IP, Mask, Gateway, PrimDNS and ScndDNS addresses, if needed, taking care of the current network settings
- set **Apply changes** parameter to **Yes** to save the configuration and restart the MT4 controller.

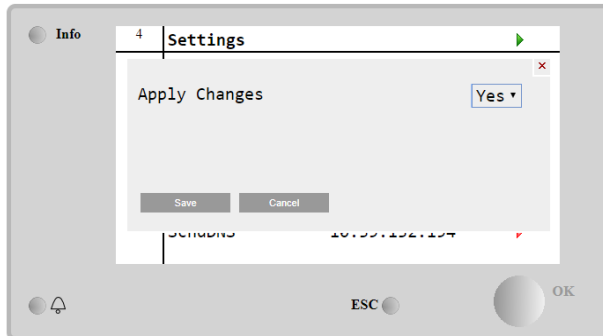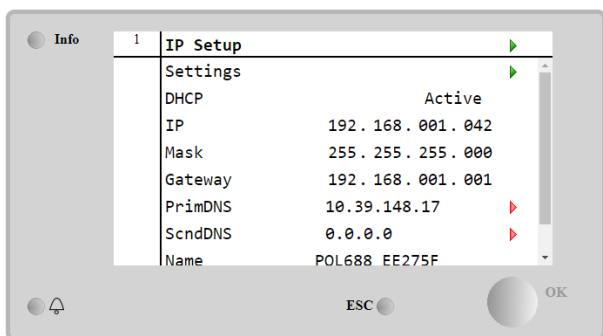

The default internet configuration is:

Parameter	Default Value
IP	192.168.1.42
Mask	255.255.255.0
Gateway	192.168.1.1
PrimDNS	0.0.0.0
ScndDNS	0.0.0.0



Note that if the DHCP is set to On and the MT4 internet configurations shows the following parameter values

Parameter	Value
IP	169.254.252.246
Mask	255.255.0.0
Gateway	0.0.0.0
PrimDNS	0.0.0.0
ScndDNS	0.0.0.0

then an internet connection problem has occurred (probably due to a physical problem, like the Ethernet cable breaking).

4.13 Daikin On Site

The Daikin on Site(DoS) page can be accessed navigating through Main Menu → View/Set Unit → Daikin on Site.

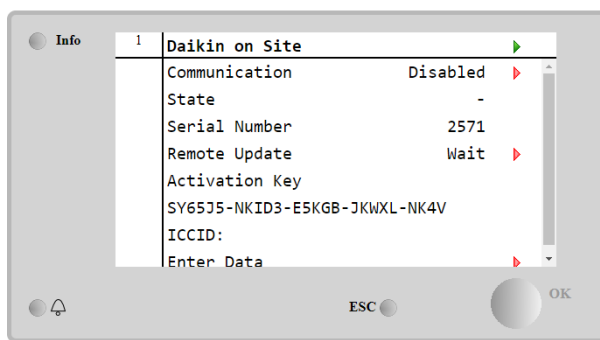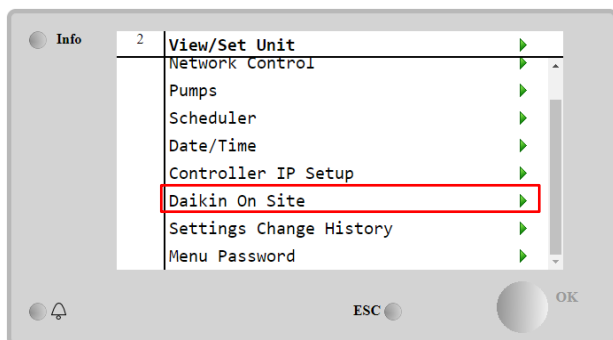

In order to use the DoS utility, the customer has to communicate the **Serial Number** to Daikin company and subscribe to the DoS service. Then, from this page, it is possible to:

- Start/Stop the DoS connectivity
- Check the connection status to DoS service
- Enable/Disable the remote update option

according to the parameters shown into the table below.

Parameter	Range	Description
Comm Start	Disabled	Stop the connection to DoS

	Enabled	Start the connection to DoS
Comm State	-	Connection to DoS is off
	IPerr	Connection to DoS cannot be established
	Connected	Connection to DoS is established and working
Remote Update	wait	The Remote update is not allowed even the request is started from DOS
	Yes	Enable the Remote update option
	NO	Disable the Remote update option

Among all the services provided by DoS, the **Remote Update** option allows to remotely update the software currently running on the PLC controller, avoiding an in-situ intervention of maintenance personnel. To this purpose, just set the Remote Update parameter to **Yes**. Otherwise, keep the parameter set to **Wait** or **Disable**.



For a successful remote software update, local service support is required, and a strong internet connection must be guaranteed.



In the unlikely event of PLC replacement, the DoS connectivity can be switched from the old PLC to the new one just communicating the current **Activation Key** to Daikin company.

4.14 Heat Recovery

The unit controller can handle a total or partial heat recovery option.

The heat recovery is enabled through the **Q8** switch installed in the electrical panel.

Some settings need to be properly set in order to match the specific plant requirements, going in **Main Page→View/Set Unit→Heat Recovery**.

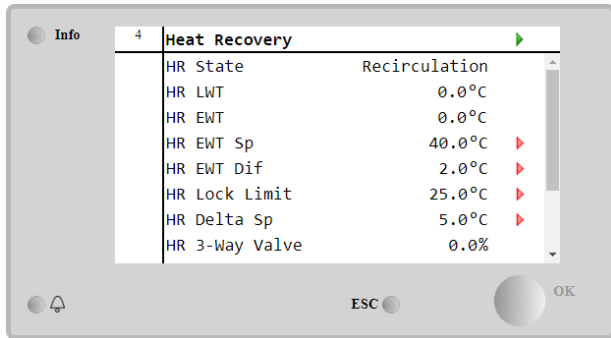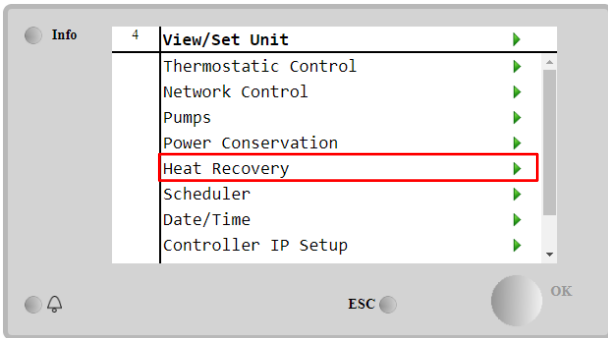

Parameter	Range	Description
HR State	Off	Heat recovery is disabled
	Recirculation	Heat recovery pump is running, but chiller fan is not regulating the heat recovery water temperature
	Regulation	Heat recovery pump is running and chiller fans are regulating the heat recovery water temperature
HR LWT		Heat recovery leaving water temperature
HR EWT		Heat recovery entering water temperature
HR EWT Sp		Heat recovery entering water temperature setpoint value
HR EWT Dif		Heat recovery
HR Lock Limit		
HR Delta Sp		
HR 3-way Valve		Heat recovery 3-way valve opening percentage
HR Pumps		Heat recovery pump state
HR Pump Hours		Heat recovery pump running hours
HR C1 Enable		Heat recovery enable on circuit 1
HR C2 Enable		Heat recovery enable on circuit 2

In case unit control source is "Network", to enable heat recovery functionality following conditions must be true:


- Enable the "HR C1 or C2 Enable" parameter in the Heat recovery page.
- Enable BMS register: Heat Recovery - Enable Setpoint

4.15 Rapid Restart

This chiller can activate a Rapid Restart (optional) sequence in reaction to a power failure. This option allows the unit to restore the load it had before the power failure in less time, reducing the standard cycle timer.

In order to Enable the Rapid Restart functionality, the customer must set to **Yes** the “Rapid Restart” parameter in the Rapid Restart page.
 The feature is configured in the factory.

The ‘Rapid Restart’ page can be accessed navigating through **Main Menu → View/Set Unit → Rapid Restart**.

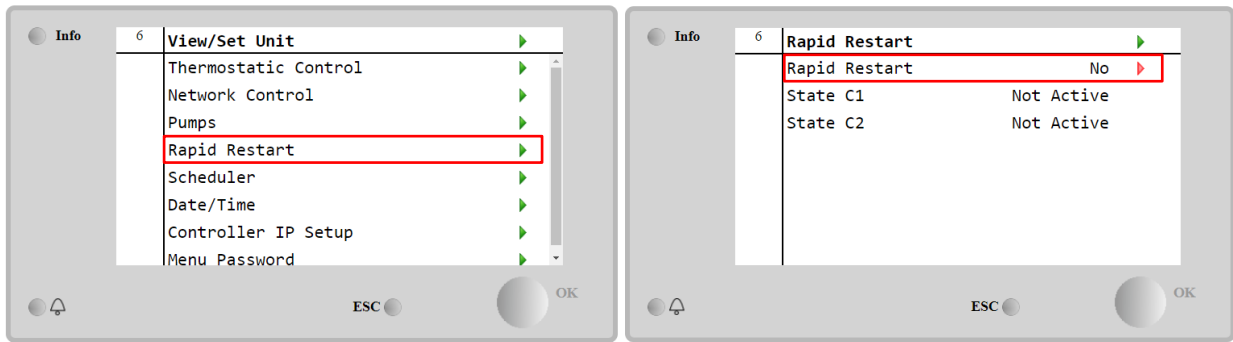

The “State C1/2” represents the actual state of the Rapid Restart procedure for each circuit.

Rapid restart is activated under the following conditions:


- The power failure exists for up to 180 seconds
- The unit and circuit switches are ON
- No unit or circuit alarms exist
- The unit has been running in the normal Run state
- The BMS Circuit Mode setpoint is set to Auto when the control source is Network
- The ELWT isn't lower than the “ELWT Setpoint + StgUpDT”
- The ELWT is greater than the “ELWT Setpoint + NomEvapDT*Par_RpdRst”, where Par_RpdRst is a parameter that can be modified

If the power failure is more than 180 seconds, the unit will start based on the standard cycle timer without Rapid Restart. After the power restart, the timers that are used during the Rapid Restart procedure are:

Parameter	Timer
Pump On	14s
1st Compr On	30s
Full Load (6 Compr)	180s


4.16 FreeCooling (Cooling Only)

The FreeCooling page can be accessed navigating through **Main Menu → View/Set Unit → FreeCooling**.

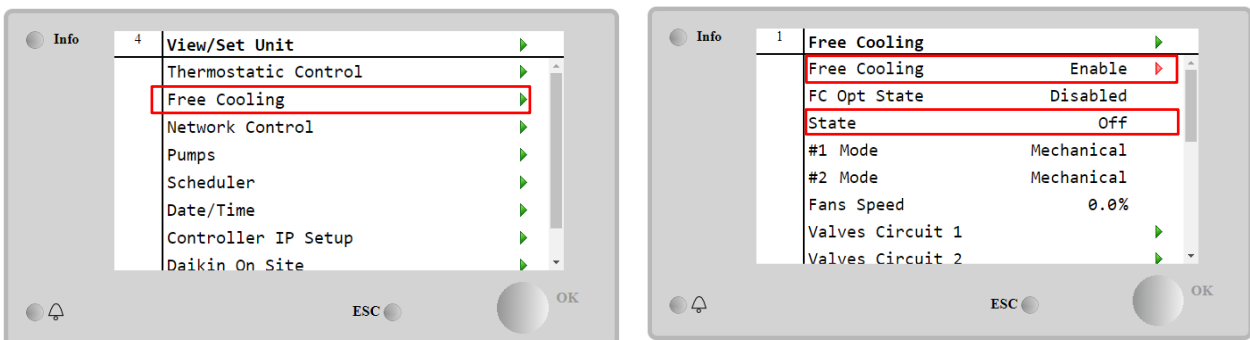


Parameter	Range	Description
FC OPT State	Disable	The Option is not enabled with all the inputs necessary, or cannot run because thermodynamics issues
	Enable	The Option is correctly enabled
State	Off	Unit's State in Off
	Free Cooling	Unit State in Free Cooling mode, both Circuits run in FreeCooling
	Mixed	Unit State in Mixed mode, one Circuit run in FreeCooling and the second run in Mechanical mode
	Mechanical	Unit State in Mechanical mode, both Circuits run in Mechanical
#x Mode	Mechanical	The Circuit x is running in Mechanical mode
	FreeCooling	The Circuit x is running in FreeCooling mode
Fans Speed	0-100%	Percentage of fans speed controlled by FreeCooling
Command VA	Open	The opening output from the controller for the VA valve
	Closed	The closing output from the controller for the VA valve
Valve A Open	True	The Valve A is opened
	False	The Valve A is NOT opened
Valve A Closed	True	The Valve A is closed
	False	The Valve A is NOT closed

In order Enable the FreeCooling functionality, the customer must set to **Enable** the “Free Cooling” parameter in the FreeCooling page. The same parameter can be accessed on the **Main Menu → Unit Enable**:

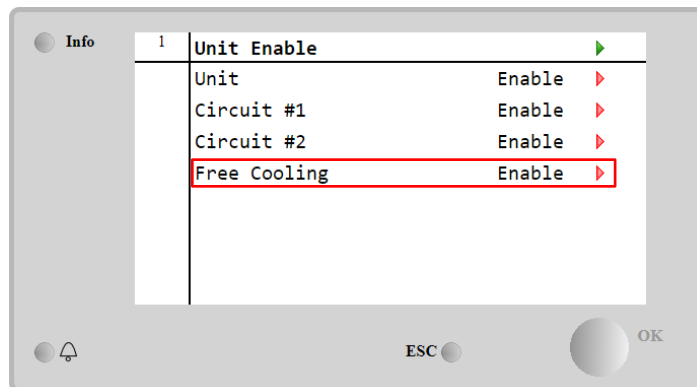

In the FreeCooling page, from View/Set Unit, the customer can visualize also some useful information, as:

- “#1 Mode” and “#2 Mode”: The operating mode of each circuit;
- “State”: The operating mode of the entire unit.

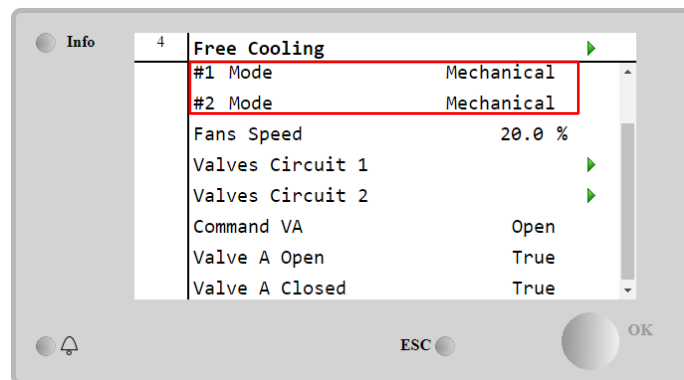

In this page is possible to navigate in the pages “Valves Circuit 1” and “Valves Circuit 2”, and both contain:

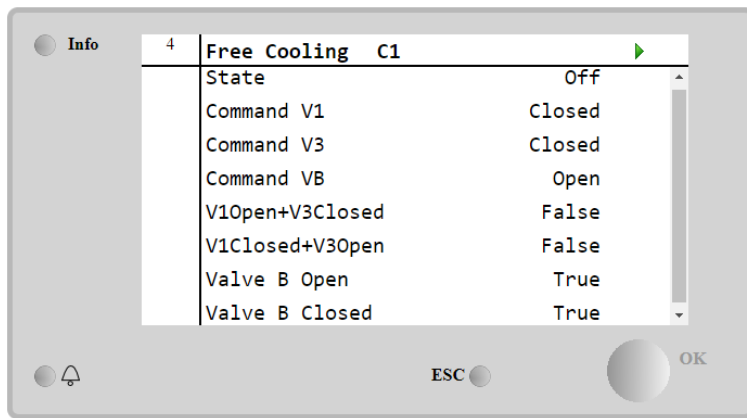


Figure 1 Valves Circuit 1

Parameter	Range	Description
State	Off	The Circuit is in Off State
	Switching	The Circuit is switching the valve in FreeCooling mode
	Regulation	The Circuit is running in FreeCooling and is regulating the Fan
	Pumpdown	The Circuit is in FreeCooling Pumpdown procedure
Command V1	Open	The opening output control from the controller for the V1 valve
	Closed	The closing output control from the controller for the V1 valve
V1Open+V3Closed	True	The Valve V1 is opened AND the Valve V3 is closed
	False	The Valve V1 is NOT opened AND/OR the Valve V3 is NOT closed
V1Closed+V3Open	True	The Valve V1 is closed AND the Valve V3 is opened
	False	The Valve V1 is NOT closed AND/OR the Valve V3 is NOT opened
Command VA	Open	The opening output control from the controller for the VA valve
	Closed	The closing output control from the controller for the VA valve
Valve B Open	True	The Valve B is opened
	False	The Valve B is NOT opened
Valve B Closed	True	The Valve B is closed
	False	The Valve B is NOT closed

4.16.1 FreeCooling Switch

FreeCooling On/Off can be managed by the user using the selector **SFC**, placed in the electrical panel, which can switch between two positions: **0 – 1**.



0 FreeCooling is disabled.



1 FreeCooling is enabled.

In order to enable the Unit to run in Free Cooling mode, both the FreeCooling Switch and the “Free Cooling” parameter, refer to 4.15, must be changed in the proper state.

4.16.2 Network On/Off

FreeCooling On/Off can be managed also with serial protocol, if the unit controller is equipped with one or more communication modules (BACNet, Modbus or LON). In order to control the unit over the network, follow below instructions:

1. SFC selector = 1 (refer to 4.16.1)
2. FreeCooling Enable = Enable (refer to 4.16)
3. Control Source = Network (refer to 4.5)
4. Close the contact Local/Network Switch (refer to 4.5), when required!

4.17 Collective Housing (Changeover Function, Heat Pump only)


It is requested the introduction of a feature that allows the automatic change of the operating mode of the unit, between heat-pump and chiller, depending on the temperature value read by a probe, that can be called “Changeover Probe”, placed in the plant.

The scope of the Changeover function is to maintain the water temperature inside a specific range, desired for the plant, for example between 30°C max and 20°C minimum.

If this temperature goes above 30°C, the unit must change its operating mode in Cool, and cool the water under that value; the same if the temperature goes below 20 °C the unit must turn into Heat Pump in order to heat the water in the loop.

The thermoregulation logic follows the standard one on the ELWT probe, with also the StageUp, StageDn, StartUp and StopDn temperatures. But, for the Changeover function the software will look at the Changeover probe, to change the operating mode of the unit.

Called COWT = Changeover Water Temperature.

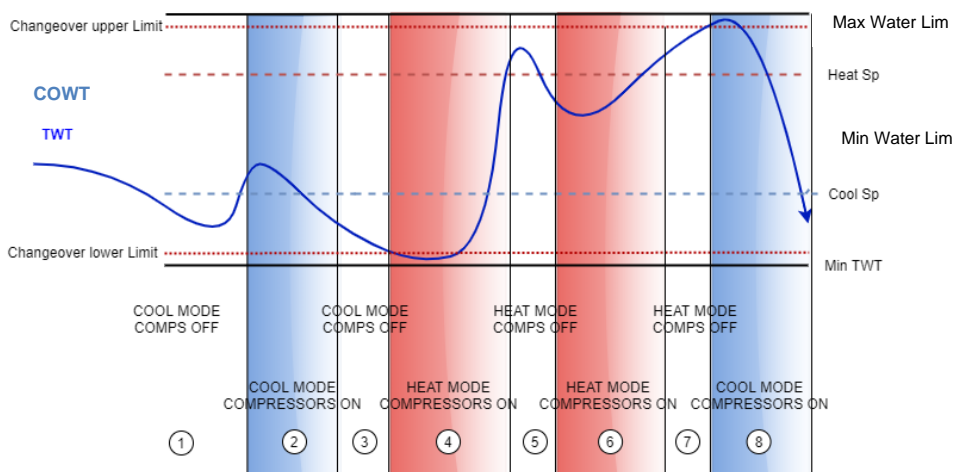


In order to maintain the normal logic of thermoregulation, in phases 1-2-3 the value of Start-Up permits the chiller to turn on in cool mode and cool the water till the Shut-dn temperature, where the unit shuts off the compressor and wait the load to turn on again.

Then, **if the COWT < ChangeoverLowerLimit**, the unit switches its operating mode into heat pump and heat the water up to *Shut-Dn temperature Heat* (Heat Sp + ShutDnDt), as in the phase 4. For thermoregulation, the unit switched to off and wait till the water goes below StartUp HeatValue to turn on again the compressor, as in phase 6.

Table below reports all parameters available in Collective Housing menu when Collective Hsng option is enabled.

HMI Path: Main Menu → View/Set Unit → Collective Hsng

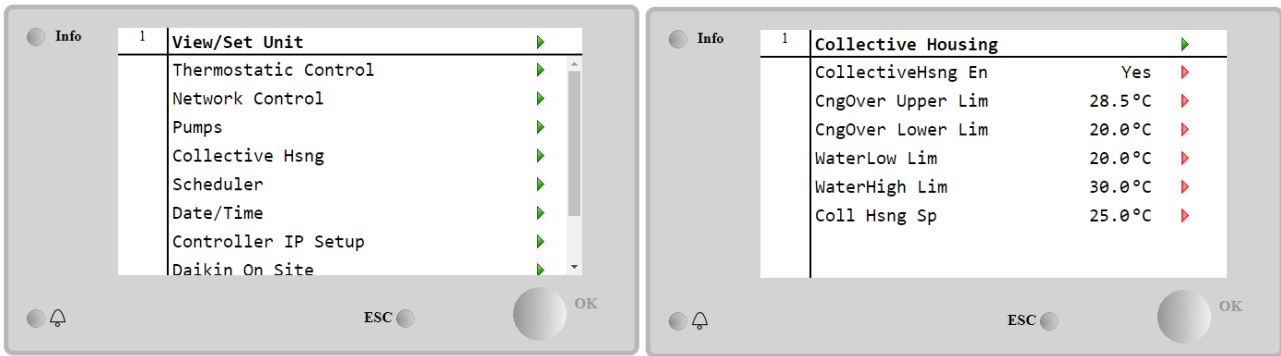

Setpoint/Sub Menu	Default	Range	Description
CollectiveHsng En	No	No-Yes	Enabling the changeover option
CngOver Upper Lim	28.0 °C	See Figure a	Value for the Changeover Upper Limit, when the Unit switch to Cool
CngOver Lower Lim	20.0 °C	See Figure a	Value for the Changeover Lower Limit, when the Unit switch to Heat
WaterLow Lim	20.0 °C		Minimum water temperature that is allowed in the point where the changeover probes is placed
WaterHigh Lim	30.0 °C		Maximum water temperature that is allowed in the point where the changeover probes is placed
Coll Hsng Sp	25.0 °C		Setpoint that decided the starting condition of the unit when is switched ON, depend on the COWT

The Temperature of the sensor that managed the Changeover Function, is visible also in the Main Menu, with the name “Cng Over Temp”.

4.18 Domestic Hot Water

This function can be used to alternate normal unit operation with generation of domestic hot water. During “DHW” operation the unit is stopped, the water circuit is deviated by a 3 way valve and unit started on again to heat up a tank, containing the domestic hot water, until a the setpoint temperature is reached. At this point unit is switched back to normal operation.

This function expects a proper plant configuration and unit settings, please refer to specific documentation.

“Domestic hot water” function can be enabled by following the path **Main Menu → Commission Unit → Configuration → options** and set the **DHW Enable** parameter to Yes.

Notice that DHW is not compatible with Pump Control Mode VPF, DT and On-Off, Collective Housing and Bivalent Operation.

Additional features dedicated to Heating application like leaving water temperature setpoint control target based on DHW tank’s temperature to guarantee a proper delta between Heat Pump’s LWT and water inside tank and the automatic secondary fixed speed for DHW water loop to guarantee proper flow in the DHW loop are available.

Domestic Hot Water parameters can be configured in **Main Menu → view/Set Unit → Domestic Hot water**

Setpoint/Sub Menu	Default	Range	R/W	Description
DHW State	-	Disabled Start Switch To Regulation SwitchBack	R	DHW state of operation
DHW Setpoint	45 °C	0..70 °C	W	DHW setpoint request
DHW Start Db	5 °C	0..20 °C	W	DHW deadband for the request
DHW Delay	30 min	0..1440min	W	Delay for reactivation of the DHW after returning to the primary circuit
DHW Temperature		°C	R	DHW tank water temperature
DHW 3WV State		Start Switch End	R	DHW 3WV state of operation

		Error		
DHW Alarm Code		0..3	R	DHW alarm code
DHW 3WV Type	2Fdbck	2Fdbck Temporized	W	DHW type of 3WV
DHW 3WV Switch time	300 s	0...900 s	W	DHW 3WV temporized time of switching
DHW Max Time	30 min	0..1440min	W	DHW max time of regulation in secondary circuit
DHW Standby Mode	off	Off On	W	With standby mode On the 3WV is always connected in the secondary circuit.
DHW Remote En	off	Off On	W	DHW remote enable
DHW Lwt Ctrl Target	off	Off On	W	DHW lwt control target based on tank temperature
DHW Secondary Fixspd	off	Off On	W	DHW secondary fixed speed for DHW water loop to guarantee proper flow in the DHW loop.

In case unit control source is "Network", to enable domestic hot water functionality following conditions must be true:

- Enable BMS register: DHW - Enable Setpoint

4.19 Bivalent Operations

The Bivalent Operation function allows the unit to manage the activation of a boiler with enabling/disabling as a function of the climatic curve of the system, set on the UC in an identical manner to the curve of the system present in the boiler, and of the outside ambient temperature.

"Bivalent Operation" function can be enabled by following the path **Main Menu → Commission Unit → Configuration → options** and set the **Bivalent operation** parameter to Yes.

Setpoint/Sub Menu	Default	Range	R/W	Description
(Bivalent Ops En)	Off	Off/On	W	Allows bivalent operation mode to start.
(Tamb Design)	0	-20...60	W	Defines design ambient temperature for the system.
(System Lwt Design)	60	20...75	W	Defines system leaving water temperature target for the system at design ambient temperature.
(System Lwt@20)	30	20...75	W	Defines system leaving water temperature target for the system at 20°C ambient temperature.
(Tcut-off)	0	-7...7	W	Defines lower limit for bivalent operation under which only boiler is enabled.
(Tbivalent)	7	0...20	W	Defines higher limit for bivalent operation over which only heat-pump is enabled. Is it possible to have transition with boiler active even if OAT > Tambient.
(System DeltaT)	10	0...50	W	This parameter shall match the exact delta temperature drop due to system load.
(Boiler Delay)	0	0...60	W	Defines activation delay between heat-pump and boiler in bivalent operation OAT range.

Additional feature dedicated to Bivalent operation like system leaving water temperature setpoint received by a remote control is possible to be enable by following the path **Main Menu → Commission Unit → Configuration → Options** and set the **Biv Syst Lwt Ctrl** parameter to **Remote**.

Moreover it's also possible configured the sensor type of the remote Lwt control, if 0-10 V or 4-20 mA.

Main Menu → Commission Unit → Configuration → Options

Setpoint/Sub Menu	Default	Range	R/W	Description
Buv Syst Lwt Ctrl	Local	Local Remote	W	Defines the type of System Lwt control
Bivalent Sns Type	0-10V	0-10V 4-20mA	W	Defines the sensor type of the System Lwt remote control.



Bivalent Operation plants

Due to the boiler capability to deliver water temperatures out of maximum unit envelope it's necessary to pay attention to water loop realization in order to guarantee entering temperatures inside the limit and use the heat pump safely and prevent any component damaging.



4.20 Software Options

For the EWYT model, the possibility to employ a set of software options has been added to the functionality of the chiller, in accordance with the new Microtech 4 installed on the Unit. The Software Options do not require any additional hardware and regard communication channels and the new energy functionalities.

During the commissioning the machine is delivered with the Option Set chosen by the customer; the Password inserted is permanent and depends on the Serial Machine Number and the Option Set selected.

In order to check the current Option Set:

Main Menu→Commission Unit→Configuration→Software Options.

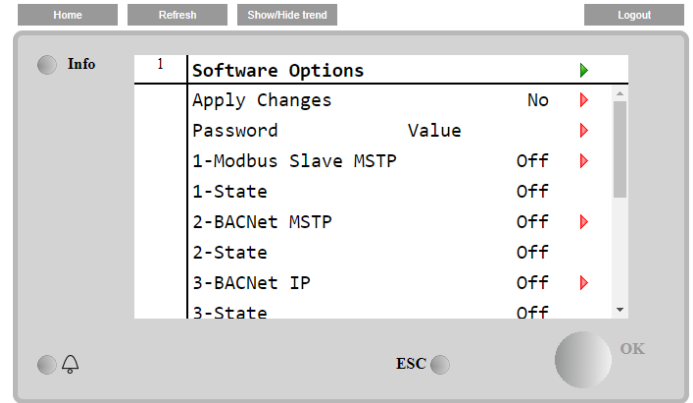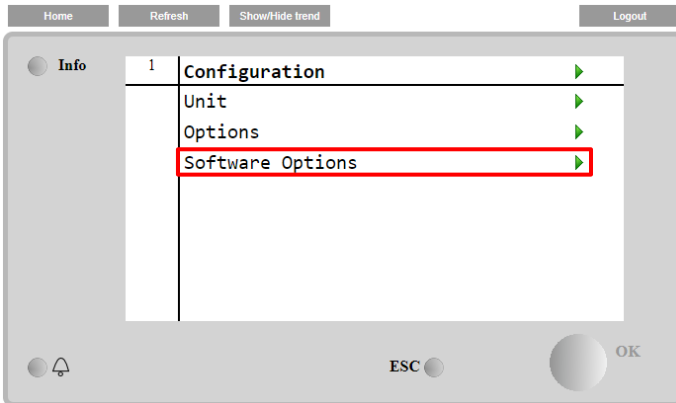

Parameter	Description
Password	Writable by Interface/Web Interface
Option Name	Option Name
Option Status	Option is activated. Option is not activated

The Current Password inserted activates the selected options.

4.20.1 Changing the Password for buying new Software Options

The Option Set and the Password are updated in the Factory. If the customer wants to change its Option Set, he needs to contact the Daikin Personnel and asks for a new password.

As soon as the new password is communicated, the follow steps allow the customer to change the Option Set by himself:

1. Wait for the circuits are both OFF, then, from the Main Page, Main Menu→Unit Enable→Unit→Disable
2. Go to Main Menu→Commission Unit→Configuration→Software Options
3. Select the Options to Activate
4. Insert the Password
5. Wait for the States of the selected options going to On
6. Apply Changes→Yes (it will reboot the controller)

The Password is changeable only if the machine is working in safe conditions: both the circuits are in the State Off.

4.20.2 Inserting the Password in a Spare Controller



If the Controller is broken and/or it needs to be replaced for any reason, the customer needs to configure the Option Set with a new Password.

If this replacement is scheduled, the customer can ask to Daikin Personnel for a new Password and repeat the steps in chapter 4.17.1.

If there is no enough time to ask for a Password to Daikin Personnel (ex. an expected failure of the controller), a set of Free Limited Password is provided, in order not to interrupt the machine's working.

These Passwords are free and visualized in:

Main Menu→Commission Unit→Configuration→Software Options→Temporary Passwords

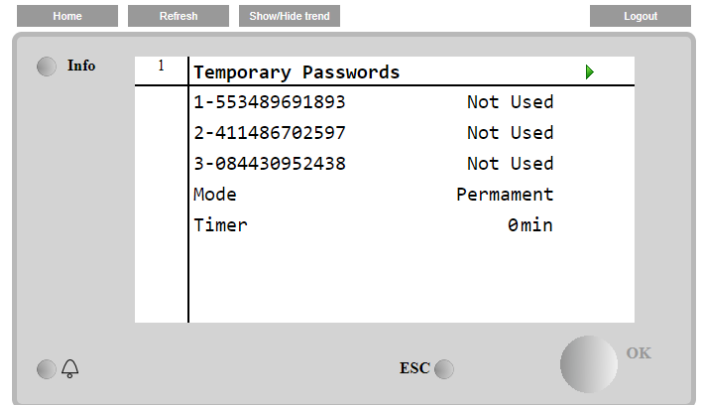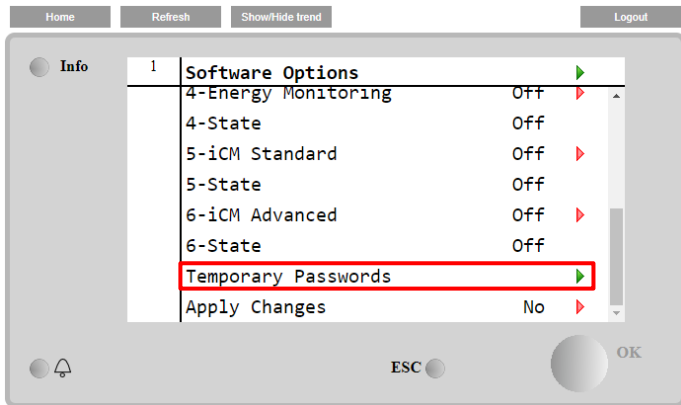

Their Use is limited up to three months:

- 553489691893 – 3 Months Duration
- 411486702597 – 1 Month Duration
- 084430952438 – 1 Month Duration

It gives the customer the time enough to contact Daikin Service and insert a new unlimited password.


Parameter	Specific Status	Description
553489691893		Activate the Option Set for 3 Months.
411486702597		Activate the Option Set for 1 Month.
084430952438		Activate the Option Set for 1 Month.
Mode	Permanent	A permanent Password is inserted. Option set can be used for unlimited time.
Temporary		A temporary Password is inserted. Option set can be used depending on the password inserted.
Timer		Last duration of the Option Set activated. Enabled only if the mode is Temporary

The Password is changeable only if the machine is working in safe conditions: both the circuits are in the State Off.


4.20.3 Modbus MSTP Software Option

When the software option "Modbus MSTP" is activated and the controller is restarted, the communication protocol settings page can be accessed via the path:


Main Menu→Commission Unit→SW Modbus MSTP

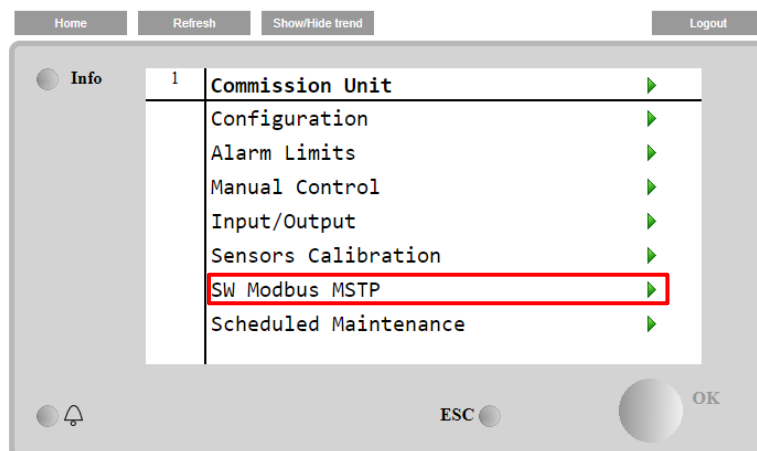

The values that can be set are the same as those found on the Modbus MSTP option page with the relative driver, and depend on the specific system where the unit is installed.

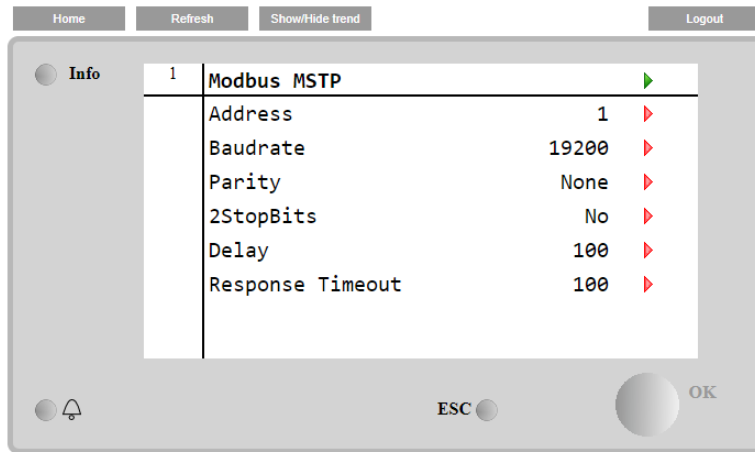


To establish the connection, the RS485 port to use is the one on the T14 terminal of the MT4 controller.




4.20.4 BACNET MSTP

When the software option "BACNet MSTP" is activated and the controller is restarted, the communication protocol settings page can be accessed via the path:

Main Menu→Commission Unit→SW BACNet MSTP

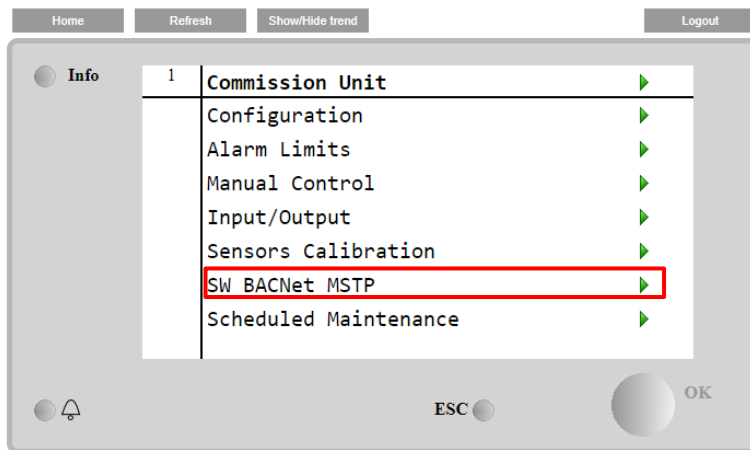


The values that can be set are the same as those found on the BACNet MSTP option page with the relative driver, and depend on the specific system where the unit is installed.

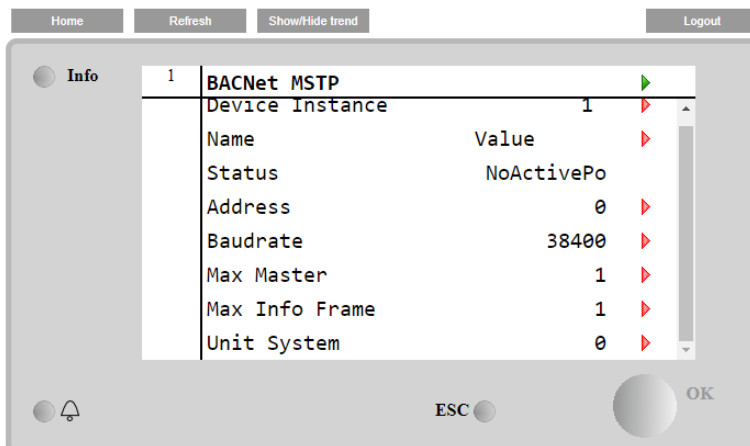




To establish the connection, the RS485 port to use is the one on the T14 terminal of the MT4 controller.




4.20.5 BACNET IP

When the software option "BACNet IP" is activated and the controller is restarted, the communication protocol settings page can be accessed via the path:

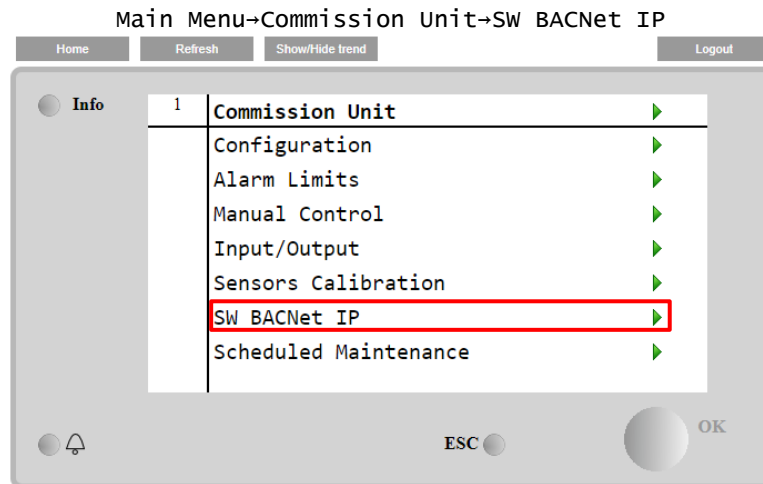

The values that can be set are the same as those found on the BACNet MSTP option page with the relative driver, and depend on the specific system where the unit is installed.

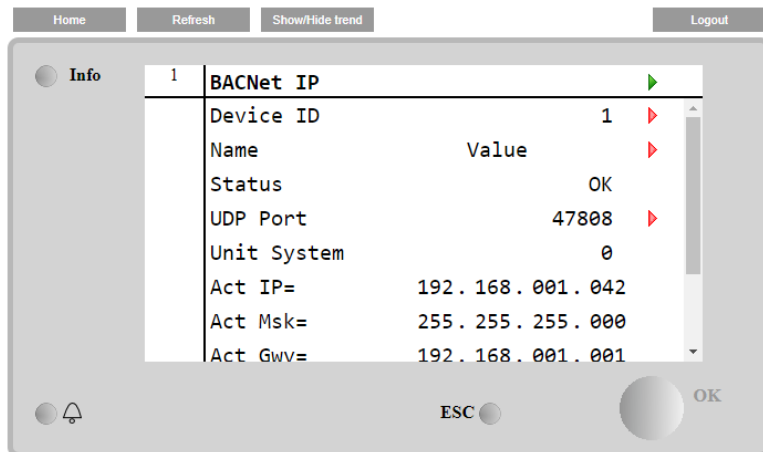

The port for LAN connection to be used for BACNet IP communication is the T-IP Ethernet port, the same one used for remote control of the controller on the PC.


4.20.6 PERFORMANCE MONITORING

The Energy Monitoring is a software option not requiring any additional hardware. It can be activated in order to achieve an estimation of the instantaneous performances of the chiller in terms of:

- Cooling Capacity or Heating Capacity
- Power Input
- EER-COP in Cooling or Heating mode

An integrated estimation of these quantities is provided. Go to the page:

Main Menu→View / Set Unit→Energy Monitoring

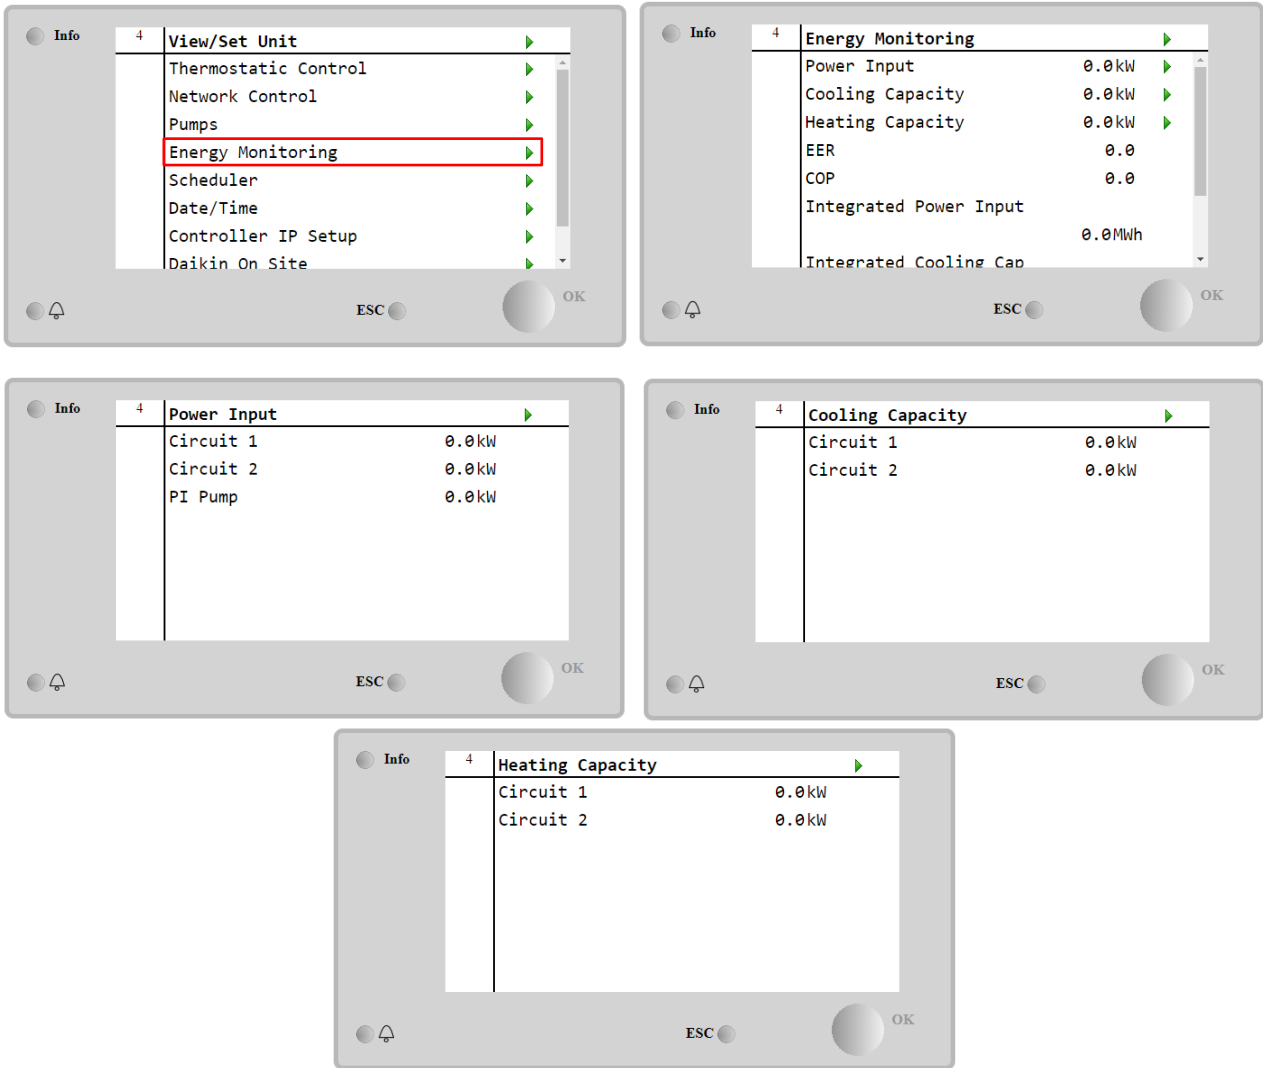

The BEG page can be accessed navigating through Main Menu → View/Set Unit → BEG

In BEG page as described above, it's possible to navigate and reset the internal database storing monitored energies of last 24 month.

Page	Parameter	Range	Description	R/W	Psw
[28] (BEG)	(EM Index)	0..72	The index selected defines the actual value displayed EM Value parameter. Cool Energy, Heat Energy e Power Input values are continuously added to actual month value. Last 24 energies value are available. In particular: 1-8 = CoolEnergy [month 1-8] 9-16 = ElectEnergy [month 1-8] 17-24 = CoolEnergy [month 9-16] 25-32 = ElectEnergy [month 9-16] 33-40 = CoolEnergy [month 17-24] 41-48 = ElectEnergy [month 17-24] 49-64 =HeatEnergy [month 1-16] 65-72 = HeatEnergy [month 17-24]	W	1
	(EM Value)	0.0...9999	The value displayed match with the description of value associated to parameter "[28.00] (EM Index)".	R	1
	(EM Reset)	Off = Passive	Command reset for energy monitoring database. Resets all stored values to zero and sets actual date as reference for	W	1

		On = Active	"month 1" values. After a reset month 1's CoolEnergy, HeatEnergy and ElectEnergy will start to be updated depending on actual unite operations.		
--	--	-------------	---	--	--



First start

For correct initialization of the Energy Monitoring function, a Reset command shall be done immediately before the first start-up of the unit; otherwise, database will be populated with values that do not respect the expected order.




Date reference

A reset command set the reference date for database. Changing data backward will cause and invalid state and database won't be updated until reference date it reached again. Changing data forward will cause a non-reversible shift of reference date and every database's cell from old reference date to actual one will be filled with a 0-value.

4.20.7 Cascade

When the software option "Cascade System" is activated and the controller is restarted, the communication protocol settings page can be accessed via the path:

Main Menu → Cascade

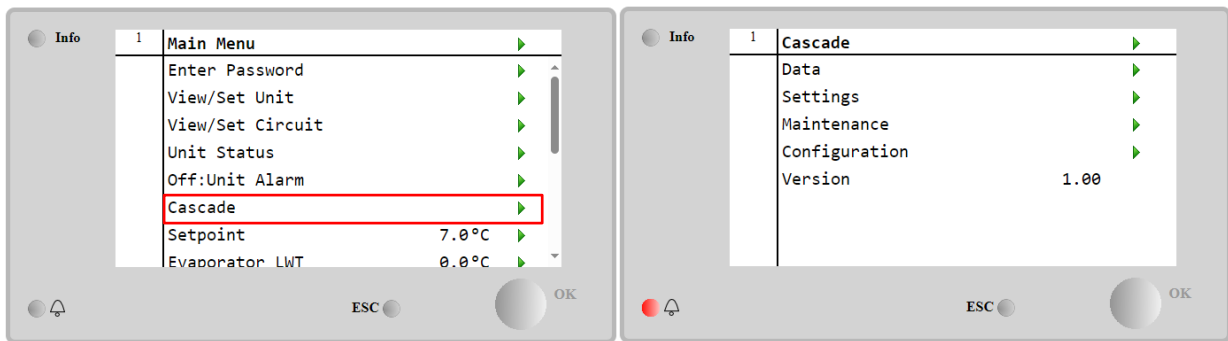

A Cascade system enable the heat production by water cooled unit supported by air cooled unit on evaporator side.



For more detailed information in Cascade menu, referring to the Cascade Management option.

4.21 Smart Grid Application

The SG page can be accessed navigating through Main Menu → View/Set Unit → SG

In case of Smart Grid operations (SG Box connected and smart grid functionalities enabled) actual state read by the gateway is available too, otherwise value is fixed at zero.

(SG State)	0...4	The value represents the actual state sent by SG Gateway: 0 = SG Disabled/SG Box Communication Error 1 = (Bypass scheduler to force off) 2 = (Normal Operation) 3 = (Force Setpoint2) 4 = (Bypass scheduler to enable) & (Force setpoint2)	R	1
------------	-------	---	---	---



For further information eg: M/S Multi-Units case, configuration notes can be found in Smart Grid Ready Box Installation & Operating Manual D-EIOCP00301-23.

5 ALARMS AND TROUBLESHOOTING

The UC protects the unit and the components from operating in abnormal conditions. Protections can be divided in preventions and alarms. Alarms can then be divided in pump-down and rapid stop alarms. Pump-down alarms are activated when the system or sub-system can perform a normal shutdown in spite of the abnormal running conditions. Rapid stop alarms are activated when the abnormal running conditions require an immediate stop of the whole system or sub-system to prevent potential damages.

The UC displays the active alarms in a dedicated page and keep an history of the last 50 entries divided between alarms and acknowledges occurred. Time and date for each alarm event and of each alarm acknowledge are stored.

The UC also stores alarm snapshot of each alarm occurred. Each item contains a snapshot of the running conditions right before the alarm has occurred. Different sets of snapshots are programmed corresponding to unit alarms and circuit alarms holding different information to help the failure diagnosis.

In the following sections it will also be indicated how each alarm can be cleared between local HMI, Network (by any of the high-level interfaces Modbus, Bacnet or Lon) or if the specific alarm will clear automatically.

5.1 Unit Alerts

All events reported in this section does not produce a unit stop, but only a visual information and an item in the alarm log.

5.1.1 BadLWTRreset - Bad Leaving Water Temperature Reset Input

This alarm is generated when the Setpoint Reset option has been enabled and the input to the controller is out of the admitted range.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. LWT Reset function cannot be used. String in the alarm list: BadLWTRreset String in the alarm log: ± BadLWTRreset String in the alarm snapshot BadLWTRreset	LWT reset input signal is out of range. For this warning out of range is considered to be a signal less than 3mA or more than 21mA.	Check for values of input signal to the unit controller. It has to be in the allowed mA range.
		Check for electrical shielding of wirings.
		Check for right value of the unit's controller output in case input signal is into allowed range.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.2 EnergyMeterComm - Energy Meter Communication Fail

This alarm is generated in case of communication problems with the energy meter.

Symptom	Cause	Solution
Bell icon is moving on controller's display. String in the alarm list: EnergyMeterComm String in the alarm log: ± EnergyMtrComm String in the alarm snapshot EnergyMtrComm	Module has no power supply	Refer to the datasheet of the specific component to see if it is correctly powered.
	Wrong cabling with the Unit Controller	Check if the polarity of the connections is respected.
	Modbus parameters not properly set	Referring to the datasheet of the specific component to see if the modbus parameters are set correctly: Address = 20 Baud Rate = 19200 kBs Parity = None Stop bits =1
	Module is broken	Check if the display shows something and the power supply is present.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.3 SmartGridComm – Smart Grid Communication Fail

This alarm is generated in case of communication problems with the energy meter.

Symptom	Cause	Solution
Bell icon is moving on controller's display. String in the alarm list:	Module has no power supply	Refer to the datasheet of the specific component to see if it is correctly powered.

SmartGridComm String in the alarm log: ± SmartGridComm String in the alarm snapshot SmartGridComm	Wrong cabling with the Unit Controller	Check if the polarity of the connections is respected.
	Modbus parameters not properly set	Referring to the datasheet of the specific component to see if the modbus parameters are set correctly.
	Module is broken	Check if the display shows something and the power supply is present.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.4 EvapPump1Fault - Evaporator Pump #1 Failure

This alarm is generated if the pump is started but the flow switch is not able to close within the recirculate time. This can be a temporary condition or may be due to a broken flowswitch, the activation of circuit breakers, fuses or to a pump breakdown.

Symptom	Cause	Solution
Unit could be ON. Bell icon is moving on controller's display. Backup pump is used or stop of all circuits in case of pump #2 failure. String in the alarm list: EvapPump1Fault String in the alarm log: ± EvapPump1Fault String in the alarm snapshot EvapPump1Fault	Pump #1 may not be operating.	Check for problem in electrical wiring of the pump #1.
		Check that electrical breaker of pump #1 is tripped.
		If fuses are used to protect the pump, check the integrity of fuses.
		Check for problem in wiring connection between pump starter and unit controller.
	Flow Switch doesn't operate properly	Check flow switch connection and calibration.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.1.5 BadDemandLimit - Bad Demand Limit Input

This alarm is generated when the Demand Limit option has been enabled and the input to the controller is out of the admitted range.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. Demand Limit function cannot be used. String in the alarm list: BadDemandLimitInput String in the alarm log: ±BadDemandLimitInput String in the alarm snapshot BadDemandLimitInput	Demand limit input out of range. For this warning out of range is considered to be a signal less than 3mA or more than 21mA.	Check for values of input signal to the unit controller. It has to be in the allowed mA range.
		Check for electrical shielding of wirings.
		Check for right value of the unit's controller output in case input signal is into allowed range.
Reset		Notes
Local HMI	<input type="checkbox"/>	Automatically clears when the signal returns in the allowed range.
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.6 EvapPump2Fault - Evaporator Pump #2 Failure

This alarm is generated if the pump is started but the flow switch is not able to close within the recirculate time. This can be a temporary condition or may be due to a broken flowswitch, the activation of circuit breakers, fuses or to a pump breakdown.

Symptom	Cause	Solution
Unit could be ON. Bell icon is moving on controller's display.	Pump #2 may not be operating.	Check for problem in electrical wiring of the pump #2.
		Check that electrical breaker of pump #2 is tripped.

Backup pump is used or stop of all circuits in case of pump #1 failure. String in the alarm list: EvapPump2Fault String in the alarm log: ± EvapPump2Fault String in the alarm snapshot EvapPump2Fault		If fuses are used to protect the pump, check the integrity of fuses.
		Check for problem in wiring connection between pump starter and unit controller.
		Check the water pump filter and the water circuit for obstructions.
	Flow Switch doesn't operate properly	Check flow switch connection and calibration.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto - Reset	<input type="checkbox"/>	

5.1.7 Switch Box Temperature sensor fault

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is On Bell icon is moving on controller's display. Bell icon is moving on controller's display. String in the alarm list: SwitchBoxTempSen String in the alarm log: ± SwitchBoxTempSen String in the alarm snapshot SwitchBoxTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.
Reset		Notes
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.1.8 ExternalEvent - External Event

This alarm indicates that a device, whose operation is linked with this machine, is reporting a problem on the dedicated input.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. String in the alarm list: ExternalEvent String in the alarm log: ±ExternalEvent String in the alarm snapshot ExternalEvent	There is an external event that has caused the opening, for at least 5 seconds, of the digital input on the controller board.	Check for reasons of external event and if it can be a potential problem for a correct chiller operation.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.9 HeatRec EntWTempSen - Heat Recovery Entering Water Temperature sensor fault

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Heat Recovery is Off Bell icon is moving on controller's display. String in the alarm list: HeatRec EntWTempSen String in the alarm log: ± HeatRec EntWTempSen String in the alarm snapshot HeatRec EntWTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.

Reset	
Local HMI	<input checked="" type="checkbox"/>
Network	<input checked="" type="checkbox"/>
Auto	<input checked="" type="checkbox"/>

5.1.10 HeatRec LvgWTempSen - Heat Recovery Leaving Water Temperature sensor fault

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Heat Recovery is Off Bell icon is moving on controller's display. String in the alarm list: HeatRec LvgWTempSen String in the alarm log: ± HeatRec LvgWTempSen String in the alarm snapshot HeatRec LvgWTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors. Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.11 HeatRec FreezeAlm - Heat Recovery Water Freeze Protect alarm

This alarm is generated to indicate that the heat recovery water temperature (entering or leaving) has dropped below a safety limit. Control tries to protect the heat exchanger starting the pump and letting the water circulate.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: HeatRec FreezeAlm String in the alarm log: ± HeatRec FreezeAlm String in the alarm snapshot HeatRec FreezeAlm	Water flow too low.	Increase the water flow.
	Inlet temperature to the heat recovery is too low.	Increase the inlet water temperature.
	Sensors readings (entering or leaving) are not properly calibrated	Check the water temperatures with a proper instrument and adjust the offsets
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.1.12 Option1BoardComm – Optional board 1 communication fail

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option1BoardComm String in the alarm log: ± Option1BoardComm String in the alarm snapshot Option1BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module. Check if LEDs are both green. Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module
Check if power supply is ok but LEDs are both off. In this case replace the module		
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.13 Option2BoardComm – Optional board 2 communication fail

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option2BoardComm String in the alarm log: ± Option2BoardComm String in the alarm snapshot Option2BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module.
		Check if LEDs are both green.
	Module address is not properly set	Check if the connector on the side is tightly inserted in the module
		Check if module's address is correct referring to the wiring diagram.
Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module	
	Check if power supply is ok but LEDs are both off. In this case replace the module	
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.14 Option3BoardComm – Optional board 3 communication fail

This alarm is generated in case of communication problems with the AC module, related with the FreeCooling option.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option3BoardComm String in the alarm log: ± Option3BoardComm String in the alarm snapshot Option3BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module.
		Check if LEDs are both green.
	Module address is not properly set	Check if the connector on the side is tightly inserted in the module
		Check if module's address is correct referring to the wiring diagram.
Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module	
	Check if power supply is ok but LEDs are both off. In this case replace the module	
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.15 EvapPDSen – Evaporator Pressure Drop sensor fault

This alarm indicates that the evaporator pressure drop transducer is not operating properly. This transducer is used only with Pump Control VPF.

Symptom	Cause	Solution
Pump speed is set with Backup value. Bell icon is moving on controller's display. String in the alarm list: EvapPDSen String in the alarm log: ± EvapPDSen String in the alarm snapshot EvapPDSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
	Check for correct plug-in of the electrical connectors.	
	Check for correct sensors wiring also according electrical scheme.	
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
	<input checked="" type="checkbox"/>	

Auto	
------	--

5.1.16 LoadPDSen – Load Pressure Drop sensor fault

This alarm indicates that the load pressure drop transducer is not operating properly. This transducer is used only with Pump Control VPF.

Symptom	Cause	Solution
Pump speed is set with Backup value. Bell icon is moving on controller's display. String in the alarm list: LoadPDSen String in the alarm log: ± LoadPDSen String in the alarm snapshot LoadPDSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
Check for correct plug-in of the electrical connectors.		
		Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.17 DHW WaterTmpSen – Domestic Hot Water Temperature sensor fault (Heat Pump Only)

This alarm is generated any time that the input resistance is out of an acceptable range. This sensor is present only when the Domestic Hot Water option is enabled.

Symptom	Cause	Solution
Unit status is Off. Bell icon is moving on controller's display. String in the alarm list: DHW waterTmpSen String in the alarm log: ± DHW waterTmpSen String in the alarm snapshot DHW waterTmpSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
Check for correct sensors wiring also according electrical scheme.		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.1.18 BivSystLwtRemAlm– Bivalent System LWT Remote Alarm (Heat Pump Only)

This alarm is generated when the Bivalent option has been enabled and the input to the controller is out of the admitted range.

Symptom	Cause	Solution
Unit status is Run. Bell icon is moving on controller's display. String in the alarm list: BivSystLwtRemAlm String in the alarm log: ± BivSystLwtRemAlm String in the alarm snapshot BivSystLwtRemAlm	Demand limit input out of range. For this warning out of range is considered to be a signal less than 2mA (or -1V) or more than 22mA (or 11V)	Check for values of input signal to the unit controller. It has to be in the allowed mA range.
		Check for electrical shielding of wirings.
		Check for right value of the unit's controller output in case input signal is into allowed range.
Reset		Notes

Local HMI	<input type="checkbox"/>	Automatically clears when the signal returns in the allowed range.
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.2 Unit Pumpdown Alarms

All alarms reported in this section produce a unit stop performed following normal pumpdown procedure.

5.2.1 UnitOff EvpEntWTempSen - Evaporator Entering Water Temperature (EWT) sensor fault

This alarm is generated any time the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvpEntWTempSen String in the alarm log: ± UnitOff EvpEntWTempSen String in the alarm snapshot UnitOff EvpEntWTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.2.2 UnitOffLvgEntWTempSen - Evaporator Leaving Water Temperature (LWT) sensor fault

This alarm is generated any time that the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOffLvgEntWTempSen String in the alarm log: ± UnitOffLvgEntWTempSen String in the alarm snapshot UnitOffEvpLvgWTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.2.3 UnitOffAmbTempSen - Outside Air Temperature sensor fault

This alarm is generated any time the input resistance is out of an acceptable range.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOffAmbTempSen String in the alarm log: ± UnitOffAmbTempSen String in the alarm snapshot UnitOffAmbTempSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according table and allowed kOhm (kΩ) range.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts.
		Check for correct plug-in of the electrical connectors.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.2.4 OAT:Lockout - Outside Air Temperature (OAT) Lockout (only in Cooling Mode)

This alarm prevents the unit to start if the outside air temperature is too low. Purpose is to prevent low pressure trips at startup. The limit depends on the fan regulation that is installed on the unit. By default this value is set to 10°C.

Symptom	Cause	Solution
Unit Status is OAT Lockout. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: StartInhbTambTempLo String in the alarm log: ± StartInhbTambTempLo String in the alarm snapshot StartInhbTambTempLo	Outside ambient temperature is lower than value set into unit's controller.	Check the minimum outside ambient temperature value set into the unit's controller. Check if this value is in accordance with chiller application, therefore check about the proper application and utilization of the chiller.
	Improper operation of Outside Ambient Temperature sensor.	Check for proper operation of OAT sensor according information about kOhm (kΩ) range related to temperature values.
Reset		Notes
Local HMI Network Auto	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	It clears automatically with a 2.5°C of hysteresis.

5.2.5 UnitOff CollHsngWTempSen – Collective Housing Water Temperature (LWT) sensor fault (Heat Pump Only)

This alarm is generated any time that the input resistance is out of an acceptable range. This sensor is present only when the Collective Housing option is enabled, and when the plant hasn't an iCM or Master/Slave control.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped with a normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOff CollHsngWTempSen String in the alarm log: ± UnitOff CollHsngWTempSen String in the alarm snapshot UnitOff CollHsngWTempSen	Sensor is broken.	Check for sensor integrity according table and allowed kOhm (kΩ) range. Check correct sensors operation
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for absence of water or humidity on electrical contacts. Check for correct plug-in of the electrical connectors. Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	

5.3 Unit Rapid Stop Alarms

All alarms reported in this section produce an instantaneous stop of the unit.

5.3.1 Power Failure - Power Failure (only for units with the UPS option)

This alarm is generated when the main power is Off and the unit controller is powered by the UPS.



Resolution of this fault requires a direct intervention on the power supply of this unit. Direct intervention on the power supply can cause electrocution, burns or even death. This action must be performed only by trained persons. In case of doubts contact your maintenance company.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Power Fault String in the alarm log: ± Power Fault String in the alarm snapshot Power Fault	Loss of one phase.	Check voltage level on each of the phases.
	Not correct sequence connection of L1,L2,L3.	Check sequence of L1, L2, L3 connections according indication on chiller's electrical scheme.
	Voltage level on the unit's panel is not in the allowed range (±10%).	Check that voltage level on each phases is into the allowed range that is indicated on the chiller label. Is important to check the voltage level on each phases not only with chiller not running, but mainly with chiller running from minimum capacity up to full load capacity. That's because voltage drop can occur from a certain unit cooling capacity level, or because

		of certain working condition (i.e. high values of OAT). In these cases the issue can be related with the sizing of power cables.
	There is a short-circuit on the unit.	Check for correct electrical isolation condition of each unit's circuit with a Megger tester.
Reset		Notes
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	

5.3.2 UnitOff EvapFreeze - Evaporator Water Temperature Low alarm

This alarm is generated to indicate that the water temperature (entering or leaving) has dropped below a safety limit. Control tries to protect the heat exchanger starting the pump and letting the water circulate.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvapwaterTmpLow String in the alarm log: ± UnitOff EvapwaterTmpLow String in the alarm snapshot UnitOff EvapwaterTmpLow	Water flow too low.	Increase the water flow.
	Inlet temperature to the evaporator is too low.	Increase the inlet water temperature.
	Flow switch is not working or no water flow.	Check the flow switch and the water pump.
	Sensors readings (entering or leaving) are not properly calibrated.	Check the water temperatures with a proper instrument and adjust the offsets
	Wrong freeze limit setpoint.	The freeze limit has not been changed as a function of glycol percentage.
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	

5.3.3 UnitOff ExternalAlarm - External alarm

This alarm is generated to indicate that an external device whose operation is linked with this unit operation. This external device could be a pump or an inverter.

Symptom	Cause	Solution
Unit status is Off. All circuits are switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: UnitOff ExternalAlarm String in the alarm log: ± UnitOff ExternalAlarm String in the alarm snapshot UnitOff ExternalAlarm	There is an external event that has caused the opening, for at least 5 seconds, of the port on the controller board.	Check causes of the external event or alarm.
		Check electrical wiring from unit controller to the external equipment in case of any external events or alarms have been occurred.
Reset		
Local HMI Network Auto	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	

5.3.4 UnitOff PVM - PVM

This alarm is generated in case of problems with the power supply to the chiller.



Resolution of this fault requires a direct intervention on the power supply of this unit. Direct intervention on the power supply can cause electrocution, burns or even death. This action must be performed only by trained persons. In case of doubts contact your maintenance company.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list:	Loss of one phase.	Check voltage level on each of the phases.
	Not correct sequence connection of L1, L2, L3.	Check sequence of L1, L2, L3 connections according indication on chiller's electrical scheme.

UnitOff PVM String in the alarm log: ± UnitOff PVM String in the alarm snapshot UnitOff PVM	Voltage level on the unit's panel is not in the allowed range (±10%).	Check that voltage level on each phases is into the allowed range that is indicated on the chiller label. Is important to check the voltage level on each phases not only with chiller not running, but mainly with chiller running from minimum capacity up to full load capacity. That's because voltage drop can occur from a certain unit cooling capacity level, or because of certain working condition (i.e. high values of OAT). In these cases the issue can be related with the sizing of power cables.
	There is a short-circuit on the unit.	Check for correct electrical isolation condition of each unit's circuit with a Megger tester.
Reset		
Local HMI Network Auto	<input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/>	

5.3.5 UnitOff EvapWaterFlow - Evaporator Water Flow Loss alarm

This alarm is generated in case of flow loss to the chiller to protect the machine against freezing.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EvapWaterFlow String in the alarm log: ± UnitOff EvapWaterFlow String in the alarm snapshot UnitOff EvapWaterFlow	No water flow sensed for 3 minutes continuously or water flow too low.	Check the water pump filler and the water circuit for obstructions.
		Check the flow switch calibration and adapt to minimum water flow.
		Check if pump impeller can rotate freely and has no damages.
		Check pumps protection devices (circuit breakers, fuses, inverters, etc.)
		Check if water filter is clogged.
		Check flow switch connections.
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	

5.3.6 UnitOff EXVDriverComm - EXV Driver Extension Communication Error

This alarm is generated in case of communication problems with the EEXV module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff EXVDriverComm String in the alarm log: ± UnitOff EXVDriverComm String in the alarm snapshot UnitOff EXVDriverComm	Module has no power supply	Check the power supply from the connector on the side of the module. Check if LEDs are both green. Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module Check if power supply is ok but LEDs are both off. In this case replace the module
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	

5.3.7 UnitOff Option4BoardComm – Optional board 4 communication fail

This alarm is generated in case of communication problems with the AC module.

Symptom	Cause	Solution
Unit status is Off. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: Option4BoardComm String in the alarm log: ± Option4BoardComm String in the alarm snapshot Option4BoardComm	Module has no power supply	Check the power supply from the connector on the side of the module. Check if LEDs are both green. Check if the connector on the side is tightly inserted in the module
	Module address is not properly set	Check if module's address is correct referring to the wiring diagram.
	Module is broken	Check if LED are on and both green. If BSP LED is solid red replace the module
		Check if power supply is ok but LEDs are both off. In this case replace the module
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.3.8 DHW 3WV Alarm – Domestic Hot Water 3 Way Valve Alarm (Heat pump only)

This alarm is generated if the 3WV for DHW is fault or damaged. The 3WV is not able to do the changeover to the secondary or primary loop. A 3WV fault can be related to connection/wiring issue or to component break up and are available only in temporized valve configuration.

Symptom	Cause	Solution
Unit could be ON. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: DHW 3WVAlarm String in the alarm log: ± DHW 3WVAlarm String in the alarm snapshot DHW 3WVAlarm	Errors in sensor wiring/connection	Check valve's cabling Check 3WV.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.3.9 UnitOff WaterOverHeat– Water Over Temperature Alarm

This alarm is generated if the EWT for DHW is fault or damaged. The 3WV is not able to do the changeover to the secondary or primary loop. A 3WV fault can be related to connection/wiring issue or to component break up and are available only in temporized valve configuration.

Symptom	Cause	Solution
Unit could be ON. All circuits are stopped immediately. Bell icon is moving on controller's display. String in the alarm list: UnitOff waterOverHeat String in the alarm log: ± UnitOff waterOverHeat String in the alarm snapshot UnitOff waterOverHeat	Entering water temperature over unit envelope limit.	Check if Unit is working inside allowed envelope
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.4 Circuit Events

5.4.1 Cx CompXStartFail – Compressor starting fail event

This event is generated to indicate that the compressor 'x' did not start correctly.

Symptom	Cause	Solution
---------	-------	----------

Compressor status is Off. If the compressor was the first to switch on, the circuit is switched off with the normal shutdown procedure. Otherwise, the circuit will run with the other compressor on. String in the event list: CmpXStartFail String in the event log: ± CmpXStartFail String in the snapshot CmpXStartFail	Compressor is blocked.	Check for compressor integrity. Check in test mode if the compressor starts manually and create Delta Pressure.
	Compressor is broken.	Check for compressor integrity. Check for correct compressor wiring also according with electrical scheme.
Local HMI Network Auto		

5.4.2 Cx DischTempUnload – High Discharge Temperature Unload event

This event is generated to indicate that the circuit partialized, shutting down a compressor, due to the high value of Discharge temperature detected. This is important for compressor reliability.

Symptom	Cause	Solution
The Circuit reduces its capacity if the DischTmp > DischTmpUnload. If the compressor was the first to switch on, the circuit is switched off with the normal shutdown procedure. Otherwise, the circuit will run with the other compressor on. String in the event list: Cx DischTempUnload String in the event log: ± Cx DischTempUnload String in the snapshot Cx DischTempUnload	The circuit is working outside the compressor envelope.	Check the working conditions, if the unit is working inside the unit envelope, and if the expansion valve is working well.
	One of the compressors is damaged.	Check if the compressors are working properly, in normal conditions and without noises.
Local HMI Network Auto		

5.4.3 Cx EvapPressUnload – Low Evaporator Pressure Unload event

This event is generated to indicate that the circuit partialized, shutting down a compressor, due to the low value of Evaporator pressure detected. This is important for compressor reliability.

Symptom	Cause	Solution
The Circuit reduces its capacity if the EvapPr < EvapPressUnload. If only one compressor is running, the circuit will maintain its capacity. Otherwise, the circuit will shut down one compressor each X sec, till the evaporator pressure increase. String in the event list: Cx EvapPressUnload String in the event log: ± Cx EvapPressUnload String in the snapshot Cx EvapPressUnload	The circuit is working outside the compressor envelope.	Check if the EXV is working well. Check the working conditions, if the unit is working inside the unit envelope, and if the expansion valve is working well.
	The outside air temperature is too low (in heat mode).	Check if the unit is working correctly inside the unit envelope. The Circuit is near the Defrost request.
	The leaving water temperature is too low (Cool Mode)	Check if the unit is working correctly inside the unit envelope.
Local HMI Network Auto		

5.4.4 Cx CondPressUnload – High Condenser Pressure Unload event

This event is generated to indicate that the circuit partialized, shutting down a compressor, due to the high value of Condensing pressure detected. This is important for compressor reliability.

Symptom	Cause	Solution
<p>The Circuit reduces its capacity if the CondPr > CondPressUnload.</p> <p>If only one compressor is running, the circuit will maintain its capacity. Otherwise, the circuit will shut down one compressor each X sec, till the condenser pressure decrease.</p> <p>String in the event list: Cx CondPressUnload</p> <p>String in the event log: ± Cx CondPressUnload</p> <p>String in the snapshot Cx CondPressUnload</p>	The circuit is working outside the compressor envelope.	<p>Check for ice on evaporator (Heat mode).</p> <p>Check the working conditions, if the unit is working inside the unit envelope, and if the expansion valve is working well.</p>
	The outside air temperature is high (in cool mode).	Check the correct functioning of the fans (in cool mode).
	The leaving water temperature is too high (Heat Mode)	Check if the unit is working correctly inside the unit envelope.
<p>Local HMI</p> <p>Network</p> <p>Auto</p>		

5.4.5 Cx HighPressPd – High Pressure during Pumpdown event

This event is generated during a pumpdown procedure, to indicate that the condensing pressure goes above the unload value.

Symptom	Cause	Solution
<p>The Circuit stops the pumpdown procedure if the CondPr > CondPressUnload.</p> <p>String in the event list: Cx HighPressPd</p> <p>String in the event log: ± Cx HighPressPd</p> <p>String in the snapshot Cx HighPressPd</p>	The pumpdown procedure was taking too long.	Check if the EXV is working well, and if it is fully close during pumpdown.
		Check the working conditions, if the unit is working inside the unit envelope, and if the expansion valve is working well.
<p>Local HMI</p> <p>Network</p> <p>Auto</p>		

5.4.6 DischTmp CompXSenf – Discharge Temperature of compressor sensor fault

This alarm indicates that the discharge temperature sensor, put one for each compressor, is not operating properly. These sensors are placed with the Option “DLT Logic” enabled.

Symptom	Cause	Solution
<p>Compressor is switched Off.</p> <p>The circuit is switched off with the normal shutdown procedure only when all compressors showed the same alarm.</p> <p>Bell icon is moving on controller's display.</p> <p>String in the alarm list: DischTmp CompXSenf</p> <p>String in the alarm log: ± DischTmp CompXSenf</p> <p>String in the alarm snapshot Cx DischTmp CompXSenf</p>	Sensor is shorted.	<p>Check for sensor integrity.</p> <p>Check correct sensors operation according information about kOhm (kΩ) range related to temperature values.</p>
	Sensor is broken.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according with electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.4.7 CxStartFail - Start Fail

This alarm is generated with a low evaporating pressure and a low saturated condensing temperature at the starting of the circuit. This alarm is auto-reset just occurs, as the unit tries automatically to restart the circuit. At the third occurrence of this failure a Restart Fault Alarm is generated.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. Led on the button 2 of External HMI is blinking String in the event list: +Cx StartFailAlm String in the event log: ± Cx StartFailAlm String in the event snapshot: Cx StartFail Alm	Low outside ambient temperature	Check the operating condition of the condenser-less unit
	Refrigerant charge low.	Check sight glass on liquid line to see if there is flash gas.
		Measure sub-cooling to see if the refrigerant charge is correct.
	Condensing Setpoint not correct for the application	Check if is necessary to increase the condensing saturated temperature setpoint
	Dry cooler not correctly installed	Check that the dry cooler is safe from strong wind
Evaporator or condensing sensor pressure broken or not correctly installed	Check the proper operation of the pressure transducers.	
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.5 Circuit Pumpdown Stop Alarms

All alarms reported in this section produce a circuit stop performed following normal pumpdown procedure.

5.5.1 Cx Off DischTmpSen - Discharge Temperature Sensor fault

This alarm is generated to indicate that the sensor is not reading properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: Cx Off DischTmpSen String in the alarm log: ± Cx Off DischTmpSen String in the alarm snapshot Cx Off DischTmpSen	Sensor is shorted.	Check for sensor integrity.
	Sensor is broken.	Check correct sensors operation according information about kOhm (kΩ) range related to temperature values.
		Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
Check for correct sensors wiring also according with electrical scheme.		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.5.2 CxOff OffSuctTempSen - Suction Temperature Sensor fault (Heating Only)

This alarm is generated to indicate that the sensor is not reading properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the normal shutdown procedure. Bell icon is moving on controller's display. String in the alarm list: CxOff OffSuctTempSen String in the alarm log: ± CxOff OffSuctTempSen String in the alarm snapshot CxOff OffSuctTempSen	Sensor is shorted.	Check for sensor integrity.
		Check correct sensors operation according information about kOhm (kΩ) range related to temperature values.
	Sensor is broken.	Check if sensor is shorted with a resistance measurement.
	Sensor is not good connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.

		Check for correct sensors wiring also according with electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.5.3 CxOff GasLeakage - Gas Leakage fault

This alarm indicates a gas leakage in the compressor box.

Symptom	Cause	Solution
Circuit status is Off. The circuit is switched off with the shutdown procedure performing a deep pumpdown of the circuit. Bell icon is moving on controller's display. String in the alarm list: CxOff GasLeakage String in the alarm log: ± CxOff GasLeakage String in the alarm snapshot CxOff GasLeakage	Gas leakage in the compressors box (A/C units).	Switch off the unit and perform a gas leakage test.
	Gas Leakage in the plant room.	Check if there are leakage on the unit with a detector eventually starting suction fans to change the air in the room.
	Gas leakage sensor fault.	Put the sensor in open air and check that the alarm can be cleared. In case replace the sensor or disable the option before getting a new part.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6 Circuit Rapid Stop alarms

All alarms reported in this section produce an instantaneous stop of the circuit.

5.6.1 CxOff CondPressSen - Condensing Pressure sensor fault

This alarm indicates that the condensing pressure transducer is not operating properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff CondPressSen String in the alarm log: ± CxCmp1 CondPressSen String in the alarm snapshot CxCmp1 CondPressSen	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.
	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
	Check for correct plug-in of the electrical connectors.	
	Check for correct sensors wiring also according electrical scheme.	
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.2 CxOff EvapPressSen - Evaporating Pressure sensor fault

This alarm indicates that the evaporating pressure transducer is not operating properly.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list:	Sensor is broken.	Check for sensor integrity. Check correct sensors operation according information about mVolt (mV) range related to pressure values in kPa.

CxOff EvapPressSen String in the alarm log: ± CxOff EvapPressSen String in the alarm snapshot CxOff EvapPressSen	Sensor is shorted.	Check if sensor is shorted with a resistance measurement.
	Sensor is not properly connected (open).	Check for correct installation of the sensor on refrigerant circuit pipe. The transducer must be able to sense the pressure through the valve's needle.
		Check for absence of water or humidity on sensor electrical contacts.
		Check for correct plug-in of the electrical connectors.
		Check for correct sensors wiring also according electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.3 CxOff DischTmpHigh - High Discharge Temperature Alarm

This alarm indicates that the temperature at the discharge port of the compressor exceeded a maximum limit which may cause damages to the mechanical parts of the compressor.



When this alarm occurs compressor's crankcase and discharge pipes may become very hot. Be careful when getting in contact with the compressor and discharge pipes in this condition.

Symptom	Cause	Solution
Discharge Temperature > High Discharge Temperature alarm value. Alarm cannot trigger if discharge temperature sensor fault is active. Bell icon is moving on controller's display. String in the alarm list: CxOff DischTmpHigh String in the alarm log: ± CxOff DischTmpHigh String in the alarm snapshot CxOff DischTmpHigh	The circuit is working outside the compressor envelope.	Check the working conditions, if the unit is working inside the unit envelope, and if the expansion valve is working well.
	One of the compressors is damaged.	Check if the compressors are working properly, in normal conditions and without noises. Check for proper operation of the discharge temperature
	Discharge temperature sensor could not operate properly.	Check for proper operation of the discharge temperature
Reset		
Local HMI		
Network		
Auto		

5.6.4 CxOff CondPressHigh – High Condensing Pressure alarm

This alarm is generated in case the Condensing saturated temperature rise above the Maximum condensing saturated temperature and the control is not able to compensate to this condition.

In case of water cooled chillers operating at high condenser water temperature, if the Condensing saturated temperature exceeds the Maximum condenser saturated temperature, the circuit is only switched off without any notification on the screen as this condition is considered acceptable in this range of operation.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff CondPressHigh String in the alarm log: ± CxOff CondPressHigh String in the alarm snapshot CxOff CondPressHigh	One or more condenser fans do not operate properly (A/C units).	Check if fans protections have been activated.
		Check that the fans can turn freely.
		Check that there is not any obstacle to the free ejection of the air blown.
	Dirty or partially blocked condenser coil (A/C units).	Remove any obstacle. Clean the condenser coil using soft brush and blower.
Inlet air temperature of the condenser is too high (A/C units).		The air temperature measured at the inlet of the condenser may not exceed the limit indicated in the operational range (working envelope) of the chiller.
		Check the location where the unit is installed and check that there are no any short circuit of the hot-air blown from the fans of the same unit, or even from fans of next chillers (Check IOM for proper installation).

	One or more condenser fan turning in wrong direction (A/C units).	Check for correct phases sequence (L1, L2, L3) in the electrical connection of the fans.
	Excessive charge of refrigerant into the unit.	Check liquid sub-cooling and suction super-heat to control indirectly the correct charge of refrigerant. If necessary recover all the refrigerant to weight the entire charge and to control if the value is in line with kg indication on unit label.
	Condensing pressure transducer could not operate properly.	Check for proper operation of the high pressure sensor.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.5 CxOff EvapPressLow - Low Pressure alarm

This alarm is generated in case the evaporating pressure drops below the Low Pressure Unload and the control is not able to compensate to this condition.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped immediately. Bell icon is moving on controller's display. String in the alarm list: CxOff EvapPressLow String in the alarm log: ± CxOff EvapPressLow String in the alarm snapshot CxOff EvapPressLow	Transitory condition like a fan staging (A/C units).	Wait until the condition is recovered by EXV control
	Refrigerant charge is low.	Check sight glass on liquid line to see if there is flash gas. Measure sub-cooling to see if the charge is correct.
	Protection limit not set to fit customer application.	Check the evaporator approach and the corresponding water temperature to evaluate the low pressure hold limit.
	High Evaporator Approach.	Clean the evaporator Check the quality of the fluid that flows into heat exchanger. Check the glycol percentage and type (ethilenic or propilenic)
	Water flow into water heat exchanger is too low.	Increase the water flow. Check that evaporator water pump is operating correctly providing the required water flow.
	Evaporating pressure transducer is not working properly.	Check the sensor for proper operation and calibrate the readings with a gauge.
	EEXV is not working correctly. It's not opening enough or it's moving in the opposite direction.	Check if pump-down can be finished for pressure limit reached; Check expansion valve movements. Check connection to the valve driver on the wiring diagram. Measure the resistance of each winding, it has to be different from 0 Ohm.
	Water temperature is low	Increase inlet water temperature. Check the low pressure safeties settings.
	Reset	
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.6 CxOff RestartFault – Restart Fault

This alarm is generated when the compressor internal protection trips

Symptom	Cause	Solution
---------	-------	----------

Compressor X is Off Bell icon is moving on controller's display. String in the alarm list: CxOff RestartFault String in the alarm log: ± CxOff RestartFault String in the alarm snapshot CxOff RestartFault	This alarm is generated after 165 seconds from circuit start if the evaporating pressure is lower than the Low Pressure Unload Limit. If this alarm is triggered means that the unit is working with too low outside ambient temperature or refrigerant charge is not properly set	Refer to the Low Pressure alarm.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.7 CxOff MechHighPress - Mechanical High Pressure Alarm

This alarm is generated when the condenser pressure rises above the mechanical high pressure limit causing this device to open the power supply to all the auxiliary relays. This causes an immediate shutdown of compressor and all the other actuators in this circuit.

Symptom	Cause	Solution
Circuit status is Off. The compressor does not load anymore or even unload, circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff MechHighPress String in the alarm log: ± CxOff MechHighPress String in the alarm snapshot CxOff MechHighPress	One or more condenser fans do not operate properly(A/C units).	Check if fans protections have been activated. Check that the fans can turn freely. Check that there is not any obstacle to the free ejection of the air blown.
	Dirty or partially blocked condenser coil (A/C units).	Remove any obstacle. Clean the condenser coil using soft brush and blower.
	Inlet air temperature of the condenser is too high (A/C units).	The air temperature measured at the inlet of the condenser may not exceed the limit indicated in the operational range (working envelope) of the chiller (A/C units). Check the location where the unit is installed and check that there are no any short circuit of the hot-air blown from the fans of the same unit, or even from fans of next chillers (Check IOM for proper installation).
	One or more condenser fan turning in wrong direction.	Check for correct phases sequence (L1, L2, L3) in the electrical connection of the fans.
	Mechanical high pressure switch is damaged or not calibrated.	Check for proper operation of the high pressure switch.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.8 CxOff NoPressChange - No Pressure Change At Start Alarm

This alarm indicates that the compressor is not able to start or to create a certain minimum variation of the evaporating or condensing pressures after start.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped. Bell icon is moving on controller's display. String in the alarm list: CxOff NoPressChange String in the alarm log: ± CxOff NoPressChange String in the alarm snapshot	Compressor cannot start	Check if the start signal is properly connected to the inverter.
	Compressor is turning in wrong direction.	Check correct phases sequence to the compressor (L1, L2, L3) according to the electrical scheme. Inverter is not properly programmed with the right direction of rotation
	Refrigerant circuit is empty of refrigerant.	Check circuit pressure and presence of refrigerant.

CxOff NoPressChange	Not proper operation of evaporating or condensing pressure transducers.	Check proper operation of evaporating or condensing pressure transducers.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.9 CompXAlm – Compressor starting fail alarm

This event is generated to indicate that the compressor 'x' did not start correctly. The compressor doesn't generate a correct lift.

Symptom	Cause	Solution
Compressor status is Off. If the compressor switches on, the circuit is switched off with the normal shutdown procedure. Otherwise, the circuit will run with the other compressor on. String in the event list: CompXAlm String in the event log: ± CompXAlm String in the snapshot CompXAlm	Compressor is blocked.	Check for compressor integrity. Check in test mode if the compressor starts manually and create Delta Pressure.
	Compressor is broken.	Check for compressor integrity. Check for correct compressor wiring also according with electrical scheme.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.10 Cx FailedPumpdown - Failed Pumpdown procedure

This alarm is generated to indicate that the circuit hadn't been able to remove all the refrigerant from the evaporator. It automatically clear as soon as the compressor stops just to be logged in the alarm history. It may not be recognized from BMS because the communication latency can give enough time for the reset. It may not even be seen on the local HMI.

Symptom	Cause	Solution
Circuit status is Off. No indications on the screen String in the alarm list: -- String in the alarm log: ± Cx FailedPumpdown String in the alarm snapshot Cx FailedPumpdown	EEXV is not closing completely, therefore there's "short-circuit" between high pressure side with low pressure side of the circuit.	Check for proper operation and full closing position of EEXV. Sight glass should not show refrigerant flow after the valve is closed. Check LED on the top of the valve, C LED should be solid green. If both LED are blinking alternately the valve motor is not properly connected.
	Evaporating pressure sensor is not working properly.	Check for proper operation of evaporating pressure sensor.
	Compressor on circuit is internally damaged with a mechanical problems for example on internal check-valve, or on internal spirals or vanes.	Check compressors on circuits.
Reset		
Local HMI	<input type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.11 CmpX Protection – Compressor Protection

This alarm is generated when the compressor internal protection trips

Symptom	Cause	Solution
Compressor X is Off Bell icon is moving on controller's display. String in the alarm list: CmpX Protection String in the alarm log: ± CmpX Protection String in the alarm snapshot CmpX Protection	Compressor motor PTC. Compressor discharge port PTC.	Compressors is damaged
		Compressor is working out of its operating limits.

Reset	
Local HMI	<input checked="" type="checkbox"/>
Network	<input checked="" type="checkbox"/>
Auto	<input type="checkbox"/>

5.6.12 CxOff SSH LowLimit – SSH too low

This alarm is generated when the circuit is running with a SSH too low for a certain amount of time.

Symptom	Cause	Solution
Circuit X is Off Bell icon is moving on controller's display. String in the alarm list: SSH LowLimit String in the alarm log: ± SSH LowLimit String in the alarm snapshot SSH LowLimit	High Evap Pressure Freezing of evaporator	Restart The circuit
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input checked="" type="checkbox"/>	

5.6.13 CxOff Low DSH – DSH too low

This alarm is generated when the circuit is running with a DSH too low for a certain amount of time.

Symptom	Cause	Solution
Circuit X is Off Bell icon is moving on controller's display. String in the alarm list: CxOff LowDSH String in the alarm log: ± CxOff LowDSH String in the alarm snapshot CxOff LowDSH	EEXV is not working correctly. It's not opening enough or it's moving in the opposite direction.	Check if pump-down can be finished for pressure limit reached; Check expansion valve movements. Check connection to the valve driver on the wiring diagram. Measure the resistance of each winding, it must be different from 0 Ohm.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.14 CxOff Drift Suct temp

This alarm is generated when the circuit is running with a DSH too low for a certain amount of time.

Symptom	Cause	Solution
Circuit X is Off Bell icon is moving on controller's display. String in the alarm list: CxOff DriftSuctTmp String in the alarm log: ± CxOff DriftSuctTmp String in the alarm snapshot CxOff DriftSuctTmp	Wrong suction temperature probe reading.	Check for sensor integrity. Check correct sensors operation according information about kOhm (kΩ) range related to temperature values. Check for correct installation of the sensor on refrigerant circuit pipe.
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input checked="" type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.15 CxOff LowPrRatio - Low Pressure Ratio Alarm

This alarm indicates that the ratio between evaporating and condensing pressure is below a limit that guarantees the proper lubrication to compressor.

Symptom	Cause	Solution
Circuit status is Off. The circuit is stopped.	Compressor is not able to develop the minimum compression.	Check fan setpoint and settings, it could be too low (A/C units).

Bell icon is moving on controller's display. String in the alarm list: CxCmp1 LowPrRatio String in the alarm log: ± CxCmp1 LowPrRatio String in the alarm snapshot CxCmp1 LowPrRatio		Check compressor absorbed current and discharge superheat. Compressor can be damaged.
		Check the correct operation of suction / delivery pressure sensors.
		Check the internal relief valve didn't opened during previous operation (check the unit history). Note: If the difference between delivery and suction pressure exceed 22bar, the internal relief valve open and need to be replaced.
		Inspect the gate rotors / screw rotor for possible damages.
		Check if the cooling tower or three way valves are operating correctly and properly set.
Reset		Notes
Local HMI Network Auto	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/>	

5.6.16 CxEXVDriverFailure – EXV Driver Failure (mono unit)

This alarm is generated when the circuit is running and from the EXV Driver POL94U ad driver fail state is detected.

Symptom	Cause	Solution
Clrcuit X is Off Bell icon is moving on controller's display. String in the alarm list: EXVDriverFailure String in the event log: EXVDriverFailure String in the alarm snapshot EXVDriverFailure	Malfunctioning of the POL94U EXV Driver.	Restart The circuit or Restart the controller.
Reset		
Local HMI Network Auto		

5.6.17 CxOff BadFeedbackVlv – Bad Feedback from Valves Alarm (Cooling Only)

This alarm is generated when the closing and opening feedback are both true at the same time, when the Circuit is running or in Pump down state.

Symptom	Cause	Solution
Circuit status is Off. Bell icon is moving on controller's display. String in the alarm list: CxOff BadFeedbackVlv String in the alarm log: ± CxOff BadFeedbackVlv String in the alarm snapshot CxOff BadFeedbackVlv	The opening and/or closing reading is faulty: the closing and opening feedback are both true at the same time for a certain period, so the real state of the valve is undefined.	Check the correct electrical connection Check that the motion of the valve is not locked
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Check the correct limit switch setting

5.6.18 Cx BadFeedbackVlvFC – Bad Feedback from Valves in FreeCooling mode Alarm (Cooling Only)

This alarm is generated when the Circuit is running in the FreeCooling mode and the closing feedback of the mechanical valves returns "FALSE", or the opening feedback of the FreeCooling valves returns "FALSE" for a certain period of time. In this case the unit does not stop, the circuit not in alarm will enter Mechanical mode and the alarm will be shown in HMI.

Symptom	Cause	Solution
Circuit FreeCooling status is Off.	The opening and/or closing reading of the valve is faulty in the specific state	Check the correct electrical connection

The Circuit changes its operating mode to Mechanical Bell icon is moving on controller's display. String in the alarm list: Cx BadFeedbackVlvFC String in the alarm log: ± Cx BadFeedbackVlvFC String in the alarm snapshot Cx BadFeedbackVlvFC	of the Circuit: the valves that must be closed are instead in an undefined state, the same for the ones that must be opened.	Check that the motion of the valve is not locked.
Check the correct limit switch setting		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.19 CxOff BadFeedbackVlvMech – Bad Feedback from Valves in Mechanical mode Alarm (Cooling Only)

This alarm is generated when the Circuit is running in the Mechanical mode and the closing feedback of the freecooling valves returns "FALSE", or the opening feedback of the mechanical valves returns "FALSE" for a certain period of time.

Symptom	Cause	Solution
Circuit status is Off. Bell icon is moving on controller's display. String in the alarm list: CxOff BadFeedbackVlvMech String in the alarm log: ± CxOff BadFeedbackVlvMech String in the alarm snapshot CxOff BadFeedbackVlvMech	The opening and/or closing reading of the valve is faulty in the specific state of the Circuit: the valves that must be closed are instead in an undefined state, the same for the ones that must be opened.	Check the correct electrical connection
		Check that the motion of the valve is not locked
Check the correct limit switch setting		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.20 CxOff BadFeedbackVlvMechPd – Bad Feedback from Valves in Mechanical PumpDown mode Alarm (Cooling Only)

This alarm is generated when the Circuit is in the Mechanical PumpDown mode and the closing feedback of the freecooling valves returns "FALSE", or the opening feedback of the mechanical valves returns "TRUE" for a certain period of time.

Symptom	Cause	Solution
Circuit status is Off. Bell icon is moving on controller's display. String in the alarm list: CxOff BadFeedbackVlvMechPd String in the alarm log: ± CxOff BadFeedbackVlvMechPd String in the alarm snapshot CxOff BadFeedbackVlvMechPd	The opening and/or closing reading of the valve is faulty in the specific state of the Circuit: the valves that must be closed are instead in an undefined state, the same for the ones that must be opened.	Check the correct electrical connection
		Check that the motion of the valve is not obstructed.
Check the correct limit switch setting		
Reset		
Local HMI	<input checked="" type="checkbox"/>	
Network	<input type="checkbox"/>	
Auto	<input type="checkbox"/>	

5.6.21 CxOff BadFeedbackVlvFCPd – Bad Feedback from Valves in FreeCooling PumpDown mode Alarm (Cooling Only)

This alarm is generated when the Circuit is in the FreeCooling PumpDown mode and the opening feedback of the freecooling valves returns "TRUE", or the closing feedback of the mechanical valves returns "FALSE" for a certain period of time.

Symptom	Cause	Solution
Circuit status is Off.	The opening and/or closing reading of the valve is faulty in the specific state	Check the correct electrical connection.

Bell icon is moving on controller's display. String in the alarm list: CxOff BadFeedbackV1vFCPd String in the alarm log: ± CxOff BadFeedbackV1vFCPd String in the alarm snapshot CxOff BadFeedbackV1vFCPd	of the Circuit: the valves that must be closed are instead in an undefined state, the same for the ones that must be opened.	Check that the motion of the valve is not locked.
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Check the correct limit switch setting.

5.6.22 CxOff BadFeedbackV1vOnTransition – Bad Feedback from Valves in Transition state Alarm (Cooling Only)

This alarm is generated when the Circuit is in transition between FreeCooling mode and Mechanical mode and the valves take too long time to close or open.

Symptom	Cause	Solution
Circuit status is Off. Bell icon is moving on controller's display. String in the alarm list: CxOff BadFeedbackV1vOnTransition String in the alarm log: ± CxOff BadFeedbackV1vOnTransition String in the alarm snapshot CxOff BadFeedbackV1vOnTransition	The valves that have to close do not return the closing feedback in a certain time interval, as well as the valves that have to open.	Check the correct electrical connection. Check that the motion of the valve is not locked.
Reset		
Local HMI Network Auto	<input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Check the correct limit switch setting.

The present publication is drawn up by of information only and does not constitute an offer binding upon Daikin Applied Europe S.p.A.. Daikin Applied Europe S.p.A. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content, and the products and services presented therein. Specifications are subject to change without prior notice. Refer to the data communicated at the time of the order. Daikin Applied Europe S.p.A. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Applied Europe S.p.A..

Daikin Applied Europe S.p.A.
Via Piani di Santa Maria, 72 - 00072 Ariccia (Rom) - Italy
Tel.: (+39) 06 93 73 11 - Fax: (+39) 06 93 74 014
<http://www.daikinapplied.eu>