

BAS integration guide

Modbus protocol

Doc. Name:

D-EIGOC00204-25_00EN

Product Name:

Modular Light

Control software name:

EvoLVE



Table of contents

1	Introduction	3
2	About this document.....	4
	2.1 Notice.....	4
	2.2 Before starting.....	4
3	Safety Information	5
4	Commission this unit in a Modbus network.....	6
	4.1 General information	6
	4.2 Modbus module (POL902)	6
5	EvoLVE integration list	8
	5.1 Coil Status	8
	5.2 Input States	8
	5.3 Holding Register.....	10



1 Introduction

This document contains information to incorporate a Microtech 4 Unit Controller into a building automation system (BAS) via Modbus communication protocols.

Microtech 4 is suitable for network integration. Data points accessible from a Modbus network are made available to a BAS provided that the proper communication module is installed / activated.

Modbus terms are not defined. Refer to the standard Modbus specifications for definitions and details about the protocol.



2 About this document

2.1 Notice

© 2014 Daikin Applied Europe, Cecchina, Roma. All rights reserved throughout the world TM ® The following are trademarks or registered trademarks of their respective companies:

- **Modbus** from Schneider Electric (originally from Modicon)
- **MicroTech III** from Daikin Applied Europe.
- **MicroTech 4** from Daikin Applied Europe.

2.2 Before starting

Application Range This document refers to the following components:

Microtech III	Controller
Microtech 4	Controller
POL902.00/STD	Modbus MSTP module

Users

Users of this document are intended to be:

- Modbus systems integrators
- Service Technicians
- Plant Engineers
- Sales staff

Conventions

Microtech III e Microtech 4 further in this document and when proper will be referred to as "Microtech".

Abbreviations

BSP **B**oard **S**upport **P**ackage (operating system)

Reference

- Siemens Building Technologies - CB1J3960en - **Modbus** communication, slave mode
- Siemens Building Technologies - CB1Q3934en - ClimatixTM **Modbus** communication modules POL902.00
- The Modbus Organization - www.modbus.org



3 Safety Information

Only personnel qualified in accordance with IEC (International Electrotechnical Commission) recommendations may be permitted access to electrical components. It is particularly recommended that all sources of electricity to the unit be shut off before any work is begun. Shut off main power supply at the main circuit breaker or isolator.

IMPORTANT: This equipment uses and emits electromagnetic signals. Tests have shown that the equipment conforms to all applicable codes with respect to electromagnetic compatibility.



RISK OF ELECTROCUTION: Even when the main circuit breaker or isolator is switched off, certain circuits may still be energized, since they may be connected to a separate power source.



RISK OF BURNS: Electrical currents cause components to get hot either temporarily or permanently. Handle power cable, electrical cables and conduits, terminal box covers and motor frames with great care.

Field of application		Use Modbus communication module only for control and monitoring functions in ventilation, air conditioning and refrigeration plants.
Intended use		Trouble-free and safe product operation of the above products presupposes transport, storage, mounting, installation, and commissioning as intended as well as careful operation.
Electrical installation		Fuses, switches, wiring and grounding must comply with local safety regulations for electrical installations.
Wiring		When wiring, strictly separate AC 230 V mains voltage from AC 24 V safety extra-low voltage (SELV) to protect against electrical shock!
Commissioning and maintenance		Only qualified staff trained accordingly may prepare for use, commission, and maintain Modbus communication modules. Maintenance of Modbus communication modules generally only means regular cleaning. We recommend removing dust and dirt from system components installed in the control panels during standard service.
Faults		Only authorized staff may diagnose and correct faults and recommission the plant. This applies to working within the panel as well (e.g. testing or changing fuses).
Storage and transport		Refer to the environmental conditions specified in the respective data sheets for storage and transport. If in doubt, contact your supplier.
Disposal		Devices contain electrical and electronic components; do not dispose of them in household garbage. Observe all local and applicable laws.



4 Commission this unit in a Modbus network


4.1 General information

Microtech 4 controller can be integrated in a Modbus network provided one of the followings:

- it is equipped with the proper communication module
- the onboard communication has been made available (software option).


Modbus MSTP (POL902)

Communication module to configure Microtech controllers in Modbus network is the POL902:

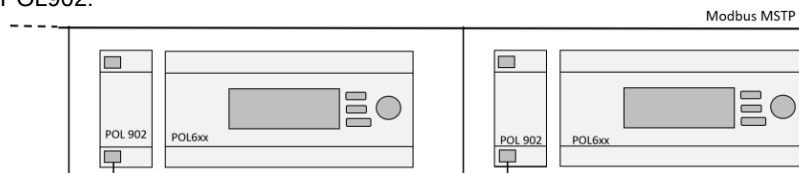

4.2 Modbus module (POL902)

Module description

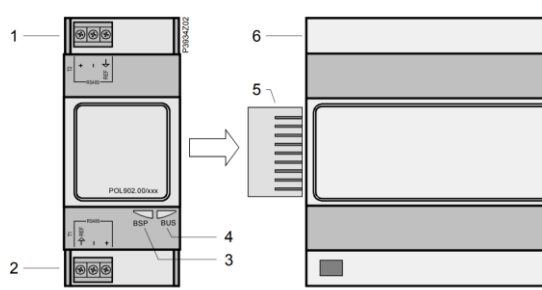

Part	Description
1	Modbus RS485 interface T1 (slave, channel 0).
2	Modbus RS485 interface T2 (slave, channel 1).
3	Status display "BSP" (Board Support Package).
4	Status display "BUS" (bus connections o.k. / bus traffic).
5	Plug connection "Communication extension bus".
6	Microtech III controller.

BSP Led

Color	Flashing frequency	Meaning
Green	Steady on	BSP operating and communication with controller working.
Yellow	Steady on	BSP operating, but no communication with controller.
Red	Steady on	Hardware fault.
Red/Yellow	Flashing at 1 Hz (1 second on/ 1 second off)	Upgrade mode running.
Red	Flashing at 2 Hz (0,5 second on/ 0,5 second off)	BSP error (software error).

BUS Led

Color	Flashing frequency	Meaning
Green	Steady on	Communication active.
Yellow	Steady on	Initializing
Red	Steady on	Communication interrupted.

Module connection

Step	Action
1	Power off the controller
2	Connect POL902 module to the controller via plug connection (part 5).
4	Power on the controller

**Configuration
procedure**

Step	Action
1	Check that BUS led status is steady on green coloured.
2	Navigate the unit's keypad/display to the main menu page and set the "service" password
3	Navigate the unit's keypad/display following the path below: Main menu □ Commissioning □ Modbus
4	Set parameters in the table below as needed according to the local network

**Configuration
parameters**

Parameter	Default value
Address T1	1
Parity T1	None
2 Stop bits T1	Yes
Baud rate T1	19200
Rspnce Dly T1	5 ms
Port T2	Passive
Address T2	1
Parity T2	None
2 Stop bits T2	Yes
Baud rate T2	19200
Rspnce Dly T2	5 ms



5 EvoLVE integration list

5.1 Coil Status

Address	Description	Values/Units	Remarks
0x0001	Alarm acknowledge input	0-1	Off*On

5.2 Input States

Address	Description	Values/Units	Remarks
1x0001	Alarm class Danger alarm (A) status	0-1	Normal*Alarm
1x0002	Alarm class Critical alarm (A) status	0-1	Normal*Alarm
1x0003	Alarm class Low alarm (B) status	0-1	Normal*Alarm
1x0004	Alarm class Warning alarm (C) status	0-1	Normal*Alarm
1x0027	Supply fan alarm	0-1	OK*Alarm
1x0030	Return fan alarm	0-1	OK*Alarm
1x0070	Filter alarm	0-1	OK*Alarm
1x0073	Fire alarm	0-1	OK*Alarm
1x0074	Supply temperature fire alarm	0-1	OK*Alarm
1x0075	Return temperature fire alarm	0-1	OK*Alarm
1x0080	Outside air temperature	0-1	OK*Alarm
1x0081	Supply air temperature	0-1	OK*Alarm
1x0085	Return air temperature	0-1	OK*Alarm
1x0086	Exhaust air temperature	0-1	OK*Alarm
1x0087	Pre-Heating temperature	0-1	OK*Alarm
1x0092	Outside air humidity	0-1	OK*Alarm
1x0094	Room humidity	0-1	OK*Alarm
1x0097	Supply air pressure	0-1	OK*Alarm
1x0098	Return air pressure	0-1	OK*Alarm
1x0100	Air quality (Nodes)	0-1	OK*Alarm
1x0102	Room unit 1	0-1	OK*Alarm
1x0087	Pre-Heating temperature	0-1	OK*Alarm
1x0094	Room humidity	0-1	OK*Alarm
1x0097	Supply air pressure	0-1	OK*Alarm
1x0098	Return air pressure	0-1	OK*Alarm
1x0100	Air quality	0-1	OK*Alarm
1x0102	Room unit 1	0-1	OK*Alarm
Present value, Unsigned Word			
3x0017	Actual operating mode	0-4	0 = Off 1 = On 2 = Ventilation 3 = Economy 4 = Standby
3x0021	Actual time scheduler state	0-3	Off*On*Ventilation*Economy
3x0025	Fresh air damper command	0-1	Close*Open
3x0028	Supply fan command	1-2	Off*On
3x0029	Supply fan output signal	0 - 100%	
3x0030	Return fan command	1-2	Off*On
3x0031	Return fan output signal	0 - 100%	
3x0032	Fresh air damper output signal	0 - 100%	
3x0033	Cooling coil output signal	0 - 100%	
3x0034	Cooling pump command	0-1	Off*On
3x0036	Recovery output signal	0 - 100%	
3x0037	Recovery command	0-1	Off*On
3x0040	Heating coil output signal	0 - 100%	
3x0041	Heating pump command	0-1	Off*On
3x0042	Electrical heating output signal / Post heating	0 - 100%	



3x0043	Electrical heating command	0-2	Off*Step1*Step2
3x0044	Pre-heating electrical command	0-2	Off*Step1*Step2
3x0051	ERQ global load output signal	0 - 100%	
3x0053	Humidifier command	0-1	Off*On
3x0060	General alarm output	0-1	Normal*Alarm
3x0067	Actual temperature compensation fan	0 - 100%	
Present value, Signed Word			
3x0072	Outside air temperature	°C	(factor 10)
3x0073	Supply air temperature	°C	(factor 10)
3x0075	Room temperature	°C	(factor 10)
3x0076	Return air temperature	°C	(factor 10)
3x0077	Exhaust Temperature	°C	(factor 10)
3x0078	Pre-Heating sensor temperature	°C	(factor 10)
3x0090	Room humidity relative	%r.H	
3x0091	Room humidity absolute	g/kg	(factor 10)
3x0092	Room enthalpy	kJ/kg	(factor 10)
3x0095	Supply air flow	m ³ /h	
3x0096	Return air flow	m ³ /h	
3x0097	Supply air pressure	Pa	
3x0098	Return air pressure	Pa	
3x0101	Air quality	ppm	
3x0104	Actual heating setpoint, Main (depending on actual control mode)	°C	(factor 10)
3x0105	Actual cooling setpoint, Main (depending on actual control mode)	°C	(factor 10)
3x0108	Actual humidity setpoint, Main (depending on actual control mode)	%r.H.	(factor 10)
3x0109	Actual dehumidity setpoint, Main (depending on actual control mode)	%r.H	%r.H., (factor 10)
3x0112	Actual Supply fan setpoint	%, Pa, m ³ /h	%, Pa, m ³ /h (depending on configuration)
3x0113	Actual Return fan setpoint	%, Pa, m ³ /h	%, Pa, m ³ /h (depending on configuration)



5.3 Holding Register

Address	Description	Values/Units	Remarks
Present value, Unsigned Word			
4x0010	Summer/Winter mode changeover	0-1	0 = Winter 1 = Summer * <i>Su/Wi Selection should be "HMI"</i>
4x0008	Network Source	0-4	0 = Auto 1 = Off 2 = On 3 = Ventilation 4 = Economy * <i>Ctrl Source should be "Local"</i>
Present value, Signed Word			
4x0020	Central temperature setpoint *	10 - 30	°C, (factor 10)
4x0021	Band temperature setpoint *	0 - 20	°C, (factor 10)
4x0022	Heating temperature setpoint *	10 - 30	°C, (factor 10)
4x0023	Cooling temperature setpoint *	10 - 30	°C, (factor 10)
4x0024	Economy central temperature setpoint *	10 - 30	°C, (factor 10)
4x0025	Economy band temperature setpoint *	0 - 20	°C, (factor 10)
4x0026	Economy heating temperature setpoint *	10 - "Heating setpoint"	°C, (factor 10)
4x0027	Economy cooling temperature setpoint *	"Cooling setpoint" - 30	°C, (factor 10)
4x0041	Humidification setpoint	0 - 100 (0 - "Dehum. Setpoint")	%r.H. (<u>Hum. High Limit</u> = "Dehum. Setpoint" if Dehumidification control is enabled)
4x0042	Dehumidification setpoint	0 - 100 (<u>"Hum. Setpoint"</u> - 100)	%r.H. (<u>Dehum. Low Limit</u> = "Hum. Setpoint" if Humidification control is enabled)
Present value, Unsigned Word			
4x0050	Supply fan setpoint	0 - "High Limit" (<u>High Limit</u> = 100% = 10000 Pa = 140000 m ³ /h)	%, Pa, m ³ /h (depending on configuration) If unit is in flow mode (m ³ /h) actual/HMI setpoint is multiplier of BMS setpoint by 10 e.g. 200 m ³ /h (BMS) = 2000 m ³ /h(actual)
4x0051	Supply fan economy setpoint	0 - "Supply fan setpoint"	%, Pa, m ³ /h



4x0053	Supply fan max force setpoint	0 - ("High Limit – Supply fan setpoint")	%, Pa, m ³ /h. (Supply fan max force setpoint is given by the difference between "High Limit" and "Supply fan setpoint")
4x0054	Return fan setpoint	0 - "High Limit" (High Limit = 100% = 10000 Pa = 140000 m ³ /h)	%, Pa, m ³ /h (depending on configuration) If unit is in flow mode (m ³ /h) actual/HMI setpoint is multiplier of BMS setpoint by 10 e.g. 200 m ³ /h (BMS) = 2000 m ³ /h(actual)
4x0055	Return fan economy setpoint	0 - "Return fan setpoint"	%, Pa, m ³ /h
4x0057		0 - ("High Limit – Return fan setpoint")	%, Pa, m ³ /h (Return fan max force setpoint is given by the difference between "High Limit" and "Return fan setpoint")
Present value, Signed Word			
4x0059	Air quality setpoint	0 - 3000	ppm

*Different setpoint combinations are considered depending on configuration. Please refer to operating manual for more details.



The present publication is drawn up by of information only and does not constitute an offer binding upon Daikin Applied Europe S.p.A..Daikin Applied Europe S.p.A. has compiled the content of this publication to the best of its knowledge. No express or implied warranty is given for the completeness, accuracy, reliability or fitness for particular purpose of its content, and the products and services presented therein. Specification are subject to change without prior notice. Refer to the data communicated at the time of the order. Daikin Applied Europe S.p.A. explicitly rejects any liability for any direct or indirect damage, in the broadest sense, arising from or related to the use and/or interpretation of this publication. All content is copyrighted by Daikin Applied Europe S.p.A.

DAIKIN APPLIED EUROPE S.p.A.

Via Piani di Santa Maria, 72 - 00072 Ariccia
(Roma) - Italia Tel: (+39) 06 93 73 11 - Fax: (+39)
06 93 74 014
<http://www.daikinapplied.eu>